

No. 3/4 starter valve:

Hook the return spring end with the No.3/4 starter valve arm.

Install and tighten the starter valve arm mounting screws to the specified torque.


TORQUE: 1 N·m (0.09 kgf·m , 0.7 lbf·ft)



No. 1/2 starter valve:

Install the starter valve arms to the starter valve. Tighten the screws to the specified torque.

TORQUE: 1 N·m (0.09 kgf·m , 0.7 lbf·ft)

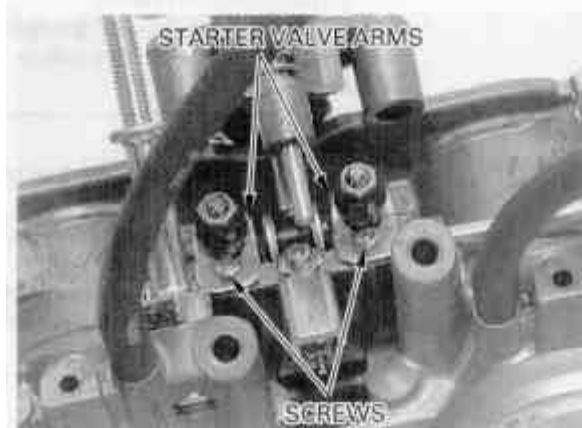

Install the wax unit assembly onto the throttle body, tighten the screws to the specified torque.

TORQUE: 5 N·m (0.5 kgf·m , 3.6 lbf·ft)



Turn the starter valve screw until it seats lightly, then back it out as noted during removal.

Install the throttle body (page 5-63).

