


ALTERNATOR/STARTER CLUTCH

Hold the flywheel using the flywheel holder, then remove the flywheel bolt.

TOOL:

Flywheel holder 07725-0040000
(Equivalent commercially available)


Remove the washer.

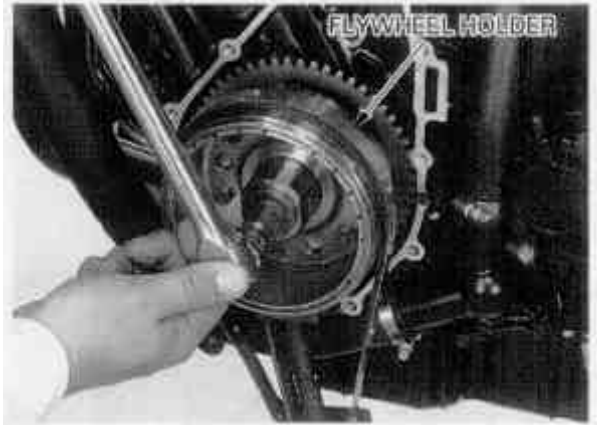


Remove the flywheel using the special tool.

TOOL:

Rotor puller 07733-0020001 or
07933-3950000

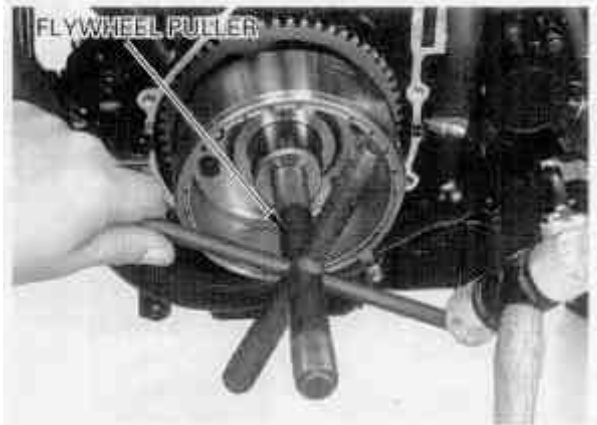

Remove the woodruff key.

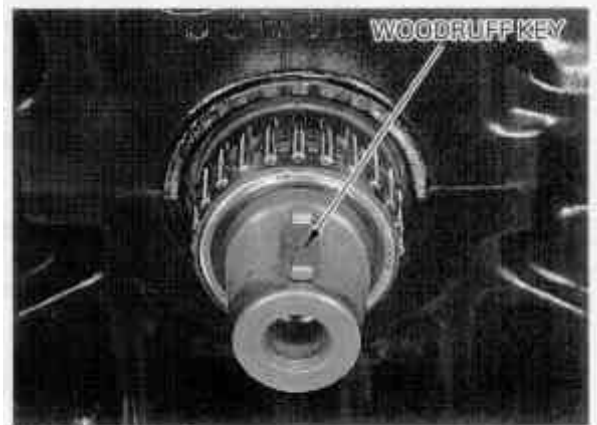

Check the starter idle gear and shaft for wear or damage.

