


## INSPECTION

### Fork spring

Measure the fork spring free length.


**SERVICE LIMIT:** 228.2 mm (8.98 in)

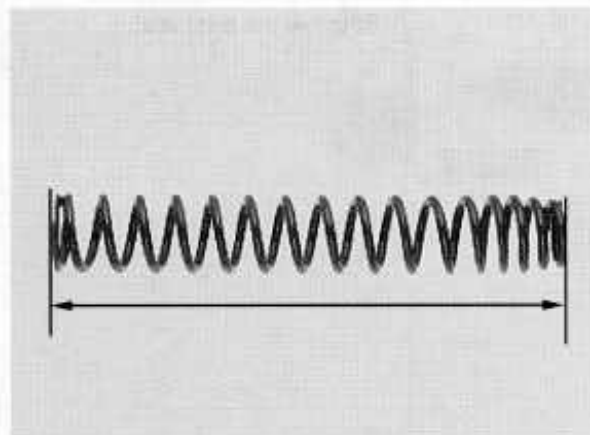

### Fork tube/slider/damper

Check the fork tube and fork slider for score marks, scratches, or excessive or abnormal wear.

Replace any components which are worn or damaged.

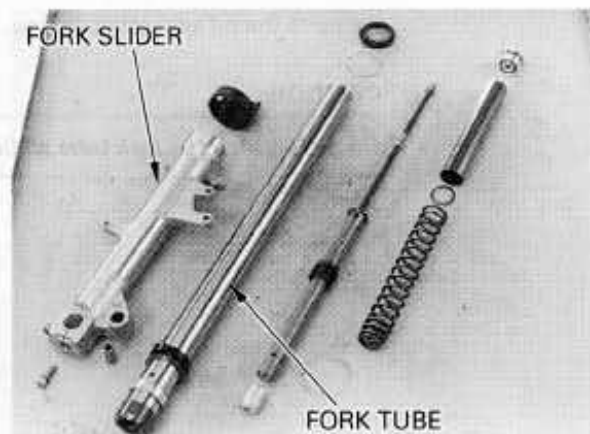


### Fork damper

Check the fork damper for damage.

Check the rebound spring for fatigue or damage.

Replace the fork damper assembly, if any component are damaged.

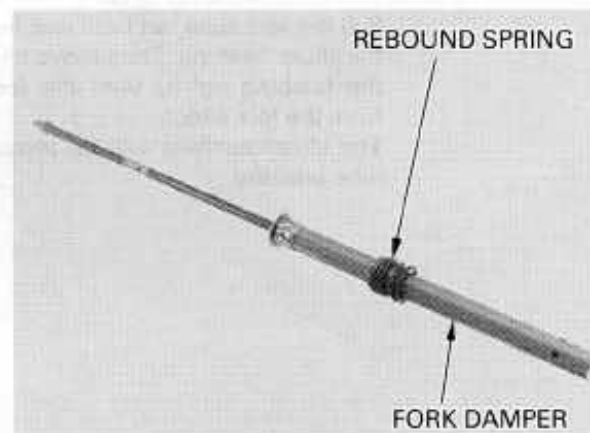

Place the fork tube in V-block and measure the runout.

Actual runout is 1/2 the total indicator reading.

**SERVICE LIMIT:** 0.20 mm (0.008 in)

