


## ASSEMBLY

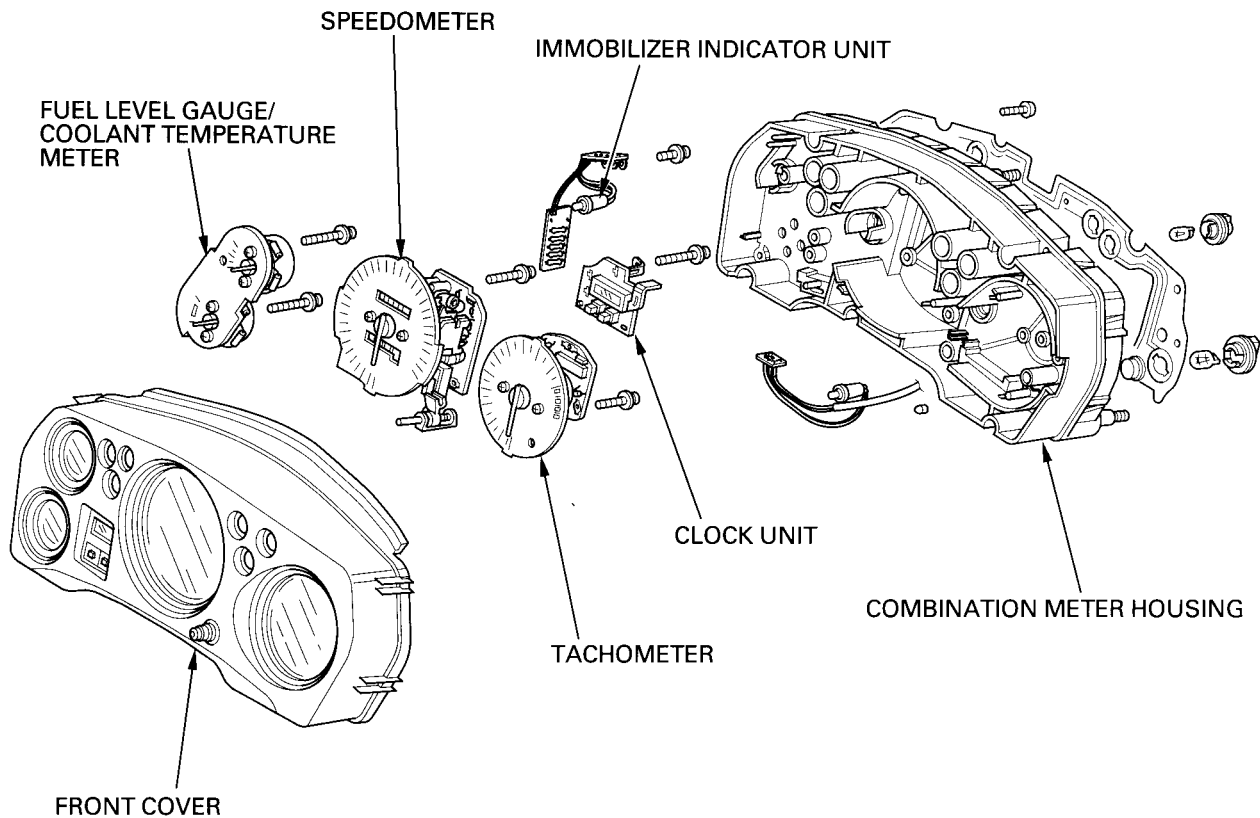

Assemble the combination meter in the reverse order of removal.

## INSTALLATION

Install the combination meter in the reverse order of removal.

### NOTE:

Route the combination meter wire properly (page 1-24).



## SPEEDOMETER/VEHICLE SPEED SENSOR

### VOLTAGE INSPECTION

Support the front end of the fuel tank (page 3-5).

Disconnect the speed sensor 3P (White) connector and check for loose or poor contact of the connector.

