

POSITION LIGHT	19-5	SYSTEM DIAGRAM	
PROPORTIONAL CONTROL VALVE	15-28	(IMMOBILIZER SYSTEM)	20-0
RADIATOR	6-8	SYSTEM LOCATION	
RADIATOR COOLANT	3-18	(FUEL SYSTEM)	5-4
RADIATOR RESERVE TANK	6-15	(LIGHTS/METERS/SWITCHES)	19-0
REAR BRAKE CALIPER	15-35	SYSTEM FLOW PATTERN	6-0
REAR FENDER	2-15	SYSTEM TESTING	6-3
REAR MASTER CYLINDER	15-23	TACHOMETER	19-13
REAR WHEEL	14-3	TAIL/BRAKE LIGHT	19-7
REGULATOR/RECTIFIER	16-8	THERMOSTAT	6-5
RIGHT CRANKCASE COVER INSTALLATION	9-27	THROTTLE BODY	5-59
RIGHT CRANKCASE COVER REMOVAL	9-12	THROTTLE OPERATION	3-4
REPLACEMENT PARTS FOR PROBLEM	20-12	TORQUE VALUES	1-13
SEAT	2-2	TOOLS	1-18
SEAT COWL	2-2	TP SENSOR	5-78
SEAT RAIL	2-19	TRANSMISSION	12-9
SERVICE RULES	1-2	TROUBLESHOOTING	
SECONDARY AIR SUPPLY SYSTEM	3-19	(ALTERNATOR/STARTER CLUTCH)	10-1
SECONDARY MASTER CYLINDER	15-20	(BATTERY/CHARGING SYSTEM)	16-3
SERVICE INFORMATION		(CLUTCH/GEARSHIFT LINKAGE)	9-3
(ALTERNATOR/STARTER CLUTCH)	10-1	(COOLING SYSTEM)	6-2
(BATTERY/CHARGING SYSTEM)	16-1	(CRANKCASE/PISTON/CYLINDER)	11-2
(CLUTCH/GEARSHIFT LINKAGE)	9-1	(CRANKSHAFT/TRANSMISSION)	12-2
(COOLING SYSTEM)	6-1	(CYLINDER HEAD/VALVES)	8-3
(CRANKCASE/PISTON/CYLINDER)	11-1	(ELECTRIC STARTER)	18-2
(CRANKSHAFT/TRANSMISSION)	12-1	(ENGINE DOES NOT START OR IS HARD TO START)	23-1
(CYLINDER HEAD/VALVES)	8-1	(ENGINE LACKS POWER)	23-2
(ELECTRIC STARTER)	18-1	(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1
(ENGINE REMOVAL/INSTALLATION)	7-1	(FRONT WHEEL/SUSPENSION/STEERING)	13-2
(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1	(FUEL SYSTEM)	5-3
(FRONT WHEEL/SUSPENSION/STEERING)	13-1	(HYDRAULIC BRAKE)	15-4
(FUEL SYSTEM)	5-1	(IGNITION SYSTEM)	17-3
(HYDRAULIC BRAKE)	15-2	(IMMOBILIZER SYSTEM)	20-7
(IGNITION SYSTEM)	17-1	(LIGHTS/METERS/SWITCHES)	19-3
(IMMOBILIZER SYSTEM)	20-1	(LUBRICATION SYSTEM)	4-2
(LIGHTS/METERS/SWITCHES)	19-1	(POOR HANDLING)	23-4
(LUBRICATION SYSTEM)	4-1	(POOR PERFORMANCE AT HIGH SPEED)	23-4
(MAINTENANCE)	3-1	(POOR PERFORMANCE AT LOW AND IDLE SPEED)	23-3
(REAR WHEEL/SUSPENSION)	14-1	(REAR WHEEL/SUSPENSION)	14-2
SHOCK ABSORBER	14-9	TURN SIGNAL	19-6
SIDE STAND	3-29	TURN SIGNAL RELAY	19-23
SIDE STAND SWITCH	19-22	UPPER COWL	2-8
SPARK PLUG	3-7	UPPER COWL COVER/INNER PANEL	2-5
SPECIFICATIONS	1-4	VALVE CLEARANCE	3-11
SPEEDOMETER/VEHICLE SPEED SENSOR	19-10	VALVE GUIDE REPLACEMENT	8-16
STARTER CLUTCH	10-5	VALVE SEAT INSPECTION/REFACING	8-17
STARTER MOTOR	18-4	WATER PUMP	6-13
STARTER RELAY SWITCH	18-10	WHEELS/TIRES	3-31
STARTER VALVE	5-67	WIND GUARD/RAM DUCT	2-14
STARTER VALVE SYNCHRONIZATION	5-72	WIRING DIAGRAMS	21-1
STATOR	10-2		
STEERING HEAD BEARINGS	3-31		
STEERING STEM	13-27		
SUSPENSION	3-29		
SUSPENSION LINKAGE	14-11		
SWINGARM	14-13		
SYSTEM DIAGRAM			
(BATTERY/CHARGING SYSTEM)	16-0		
(ELECTRIC STARTER)	18-0		
(FUEL SYSTEM)	5-5		
(IGNITION SYSTEM)	17-0		