


SYSTEM DIAGRAM ('99)

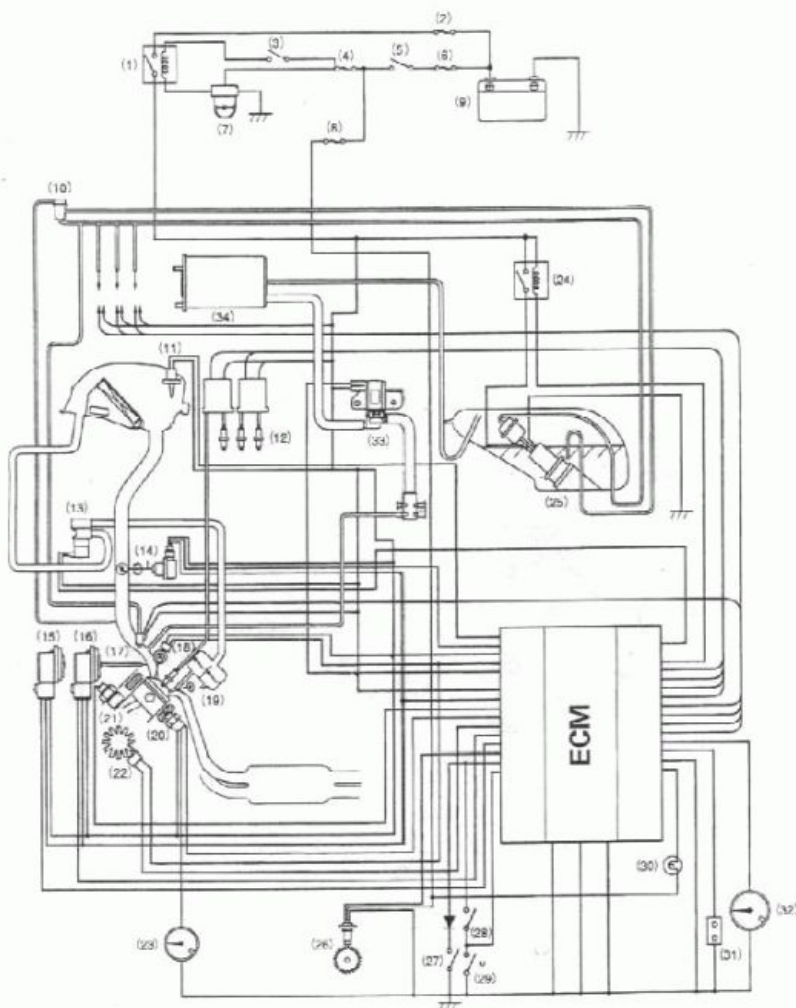

- (1) Engine stop relay
- (2) Main fuse B (30A)
- (3) Engine stop switch
- (4) Sub-fuse (10A)
- (5) Ignition switch
- (6) Main fuse A (30A)
- (7) Bank angle sensor
- (8) Sub-fuse (10A)
- (9) Battery
- (10) Pressure regulator
- (11) IAT sensor
- (12) Spark plug
- (13) PAIR solenoid valve
- (14) TP sensor
- (15) BARO sensor
- (16) MAP sensor
- (17) Injector

- (18) Cam pulse generator
- (19) PAIR check valve
- (20) ECT sensor
- (21) Knock sensor
- (22) Ignition pulse generator
- (23) Water temperature meter
- (24) Fuel cut-off relay
- (25) Fuel pump
- (26) Vehicle speed sensor
- (27) Neutral switch
- (28) Clutch switch
- (29) Side stand switch
- (30) Malfunction indicator
- (31) Service check connector
- (32) Tachometer
- (33) Purge control solenoid valve (California type only)
- (34) EVAP canister