


Measure the voltage between the connector terminals of the wire harness side.

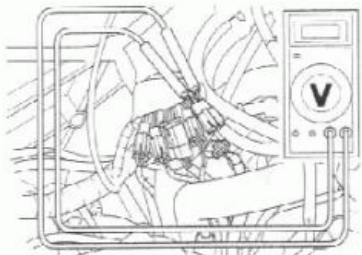


Connection: Black/brown (+) – Green/black (-)
Standard: 12 V

Out of range → • Open or short circuit in Green/black wire.

Correct

Check for continuity of the Pink/green wire between vehicle speed sensor connector and ECM connector.

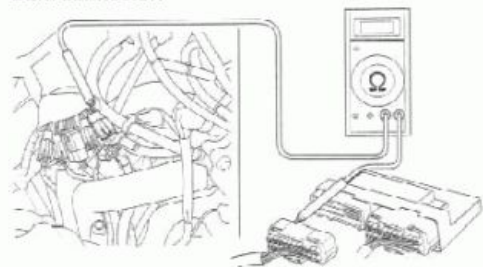

Standard: Continuity

No continuity → • Open or short circuit in Pink/green wire.

Continuity → • Replace the ECM with a new one, and inspect it again.