


Remove the dust seal.

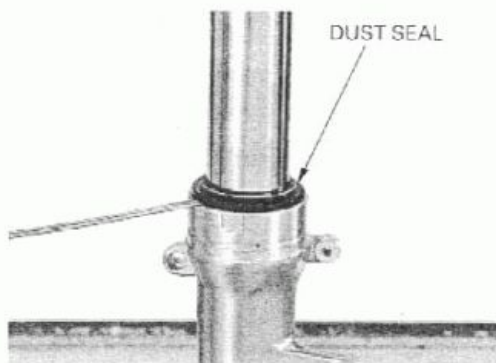

Remove the oil seal stopper ring.


CAUTION:

Do not scratch the fork tube sliding surface.



Pull the fork tube out until you feel resistance from the slider bushing. Then move it in and out, tapping the bushing lightly until the fork pipe separates from the fork slider.

The slider bushing will be forced out by the fork pipe bushing.

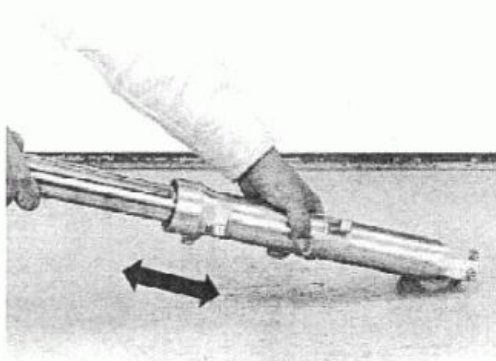

Remove the oil seal, back-up ring and slider bushing from the fork pipe.

NOTE:

Do not remove the fork pipe bushing unless it is necessary to replace it with a new one.

