

TROUBLESHOOTING

SPEED SENSOR/SPEEDOMETER

The odometer/trip meter operates normally, but the speedometer does not operate

- Faulty speedometer

The speedometer operates normally, but the odometer/trip meter does not operate

- Faulty odometer/trip meter

The speedometer operation is abnormal

- Check for the following before diagnosing.
 - Blown main or sub fuses
 - Loose or corroded terminals of the connectors
 - Discharged battery

