

Requisite Service

- Carburetor removal (page 6-5).

Procedure		Q'ty	Remarks
Separate No3./No.4 carb. from No1./No.2 carb.			
(1)	Carburetor breather tube	2	
(2)	Carburetor fuel tube	3	
(3)	Carburetor insulator	4	
(4)	Screws	16	
(5)	Air cleaner base	1	
(6)	Air funnel	4	
(7)	O-ring	4	
(8)	Bystarter arm screw	2	
(9)	Plastic collar	2	
(10)	Plastic washer	2	
(11)	Bystarter arm	1	
(12)	Thrust spring	1	
(13)	Spring seat	1	
(14)	Carburetor connecting bolt/nut (5mm)	1/2	NOTE • Loosen each nut gradually and alternately.
(15)	Carburetor connecting bolt/nut (6mm)	1/2	
(16)	No3. carb. synchronization spring	1	
(17)	Air joint pipe (3-way)/O-ring	1/2	
(18)	Dowel pin (5mm bolt)	1	
(19)	Collared dowel pin (6mm bolt)	1	
Separate No1. carb. from No.2 carb.			
(20)	No1. carb. synchronization spring	1	
(21)	Thrust spring	1	
(22)	Air joint pipe (rubber)	1	
(23)	Air vent pipe (3-way)/O-ring	1/2	
(24)	Fuel joint pipe (3-way)/O-ring	1/2	
(25)	Dowel pin (5mm bolt)	1	
(26)	Dowel pin (6mm bolt)	1	
Separate No3. carb. from No. 4 carb.			
(27)	No4. carb. synchronization spring	1	
(28)	Thrust spring	1	
(29)	Air joint pipe (rubber)	1	
(30)	Air vent pipe (3-way)/O-ring	1/2	
(31)	Fuel joint pipe (3-way)/O-ring	1/2	
(32)	Bystarter cable holder	1	
(33)	Dowel pin (5mm bolt)	1	
(34)	Dowel pin (6mm bolt)	1	