


Front Master Cylinder Disassembly/Assembly

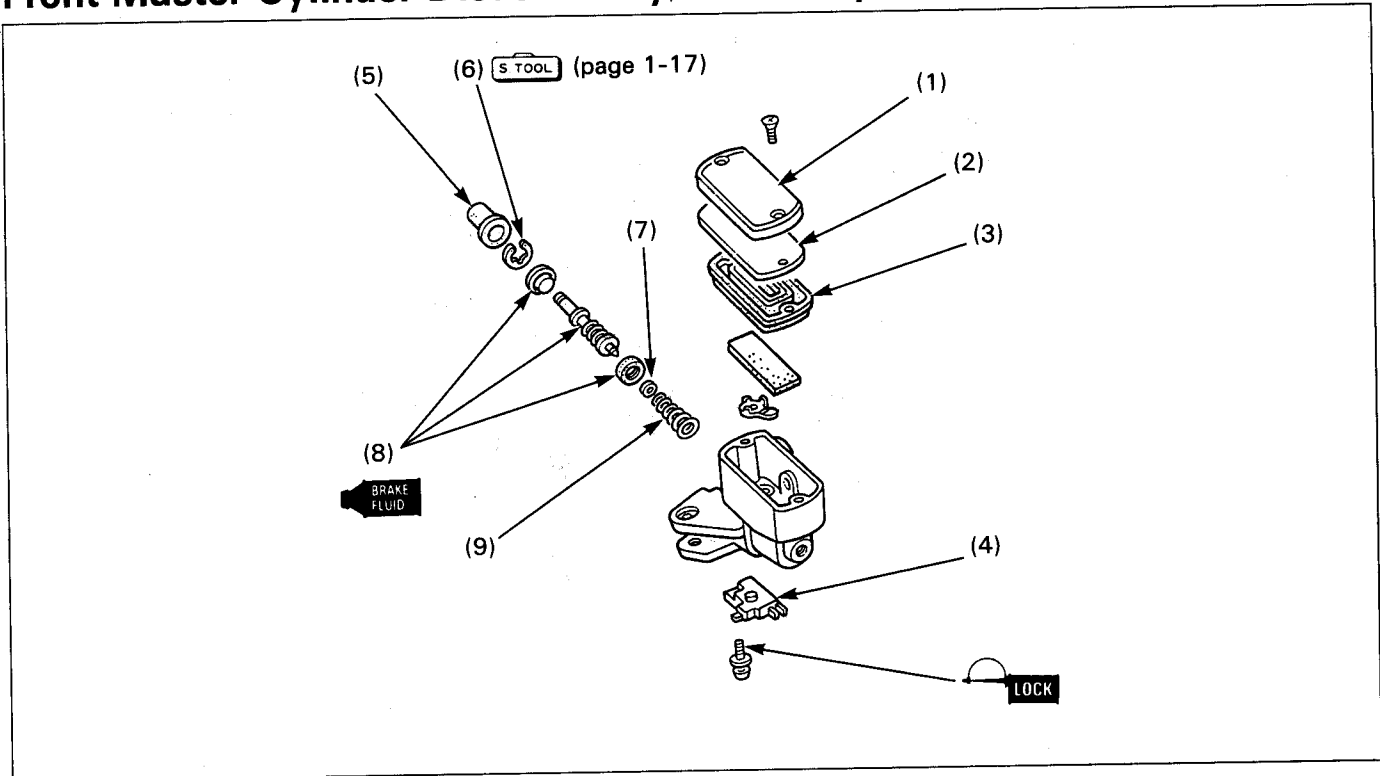

WARNING

- Check the brake system by applying the brake after air bleeding.

CAUTION

- Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.
- Do not allow the lips of the cups to turn inside out and be certain the snap ring is firmly seated in the groove.

NOTE

- The master cylinder piston, cups and spring must be installed as a set.

Procedure	Q'ty	Remarks
Disassembly Order		Assembly is in the reverse order of disassembly.
(1) Reservoir cover	1	
(2) Diaphragm plate	1	
(3) Diaphragm	1	
(4) Front brakelight switch	1	
(5) Rubber boot	1	
(6) Snap ring	1	CAUTION • Be certain the snap ring is fully seated in the groove. • Install the snap ring with the chamfered side facing the master piston.
(7) Stopper plate	1	
(8) Master piston assembly	1	
(9) Spring	1	Install the spring with the tapered side facing the master piston.