

FRAME/BODY PANELS/EXHAUST SYSTEM

California type: Remove the seven trim clips and bolt from the bottom of the lower cowls.

Remove the lower cowl-to-middle cowl pan screws. Remove the lower cowl mounting bolts and then remove the lower cowls by sliding them backward.


Install the lower cowl by aligning the tabs of the lower cowl with the grooves of the middle cowl.

Install and tighten the lower cowl-to-middle cowl pan screws to the specified torque.

TORQUE: 1.5 N·m (0.15 kgf·m, 1.1 lbf·ft)

Install the lower cowl mounting bolts.

Install the seven trim clips and bolt from the bottom of the lower cowls.

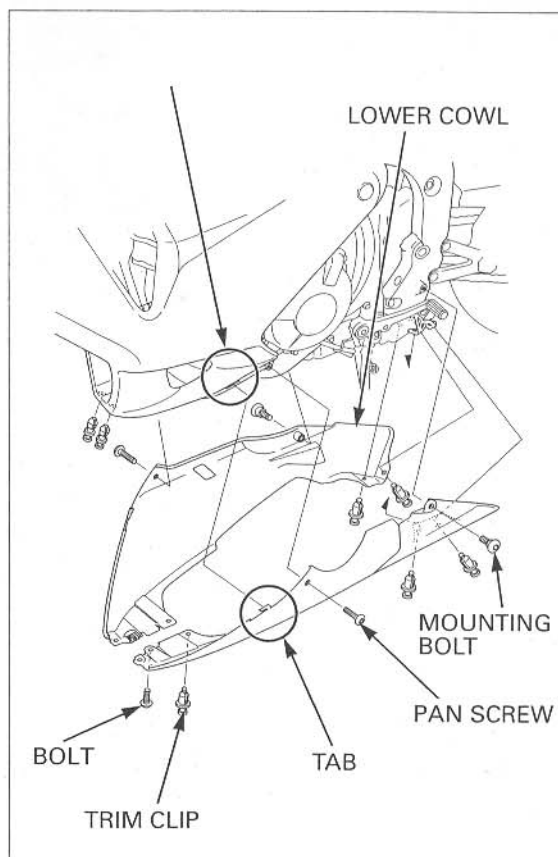


MIDDLE COWLS

REMOVAL

Remove the lower cowls (page 3-6).

Remove the middle cowl-to-upper cowl pan screws and trim clip.

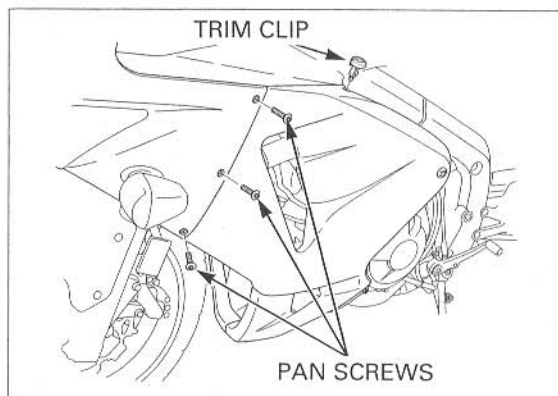

Unlock the lock bolt by turning it counterclockwise and remove the middle cowl.

