


Remove the radiator reserve tank (page 7-17).

Remove and discard the oil filter cartridge using the special tool.

**TOOL:**


Oil filter wrench

07HAA-PJ70101 or  
07HAA-PJ70100  
(U.S.A. only)

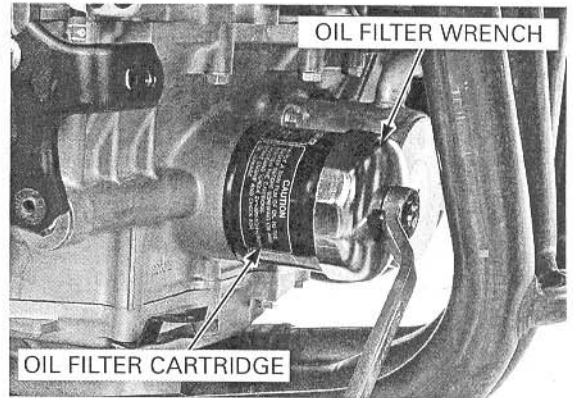


Check that the sealing washer on the drain bolt is in good condition, and replace if necessary. Install and tighten the drain bolt.

**TORQUE: 29 N·m (3.0 kgf·m, 22 lbf·ft)**

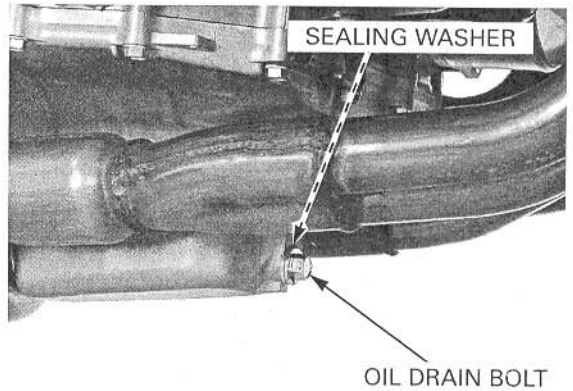

Apply clean engine oil to the new oil filter O-ring.

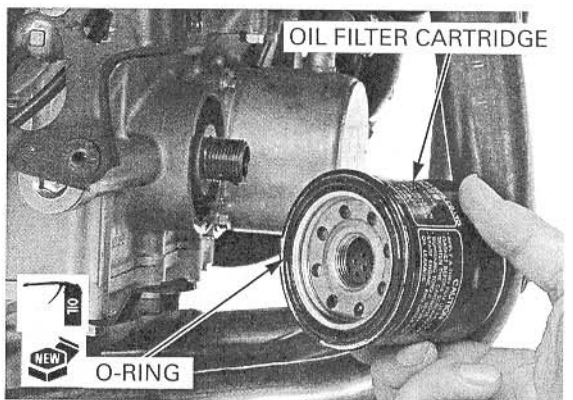

Install the new oil filter and tighten it to the specified torque.

**TOOL:**

Oil filter wrench

07HAA-PJ70101

**TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)**

Install the radiator reserve tank (page 7-18).

