


NUTS, BOLTS, FASTENERS


Check that all chassis nuts and bolts are tightened to their correct torque values (page 1-12).
Check that all safety clips, hose clamps and cable stays are in place and properly secured.

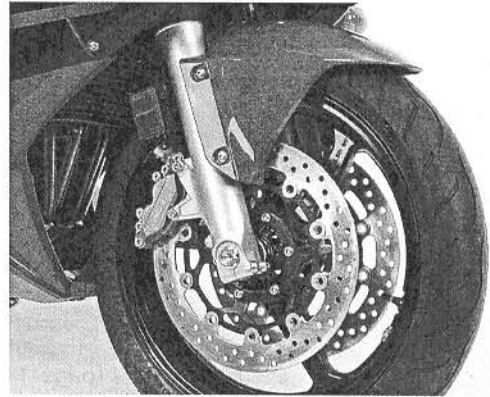

WHEELS/TIRES

Support the motorcycle securely and raise the front wheel off the ground.
Hold the front fork leg and move the front wheel sideways with force to see if the wheel bearings are worn.

Refer to page 14-12 for front wheel service.

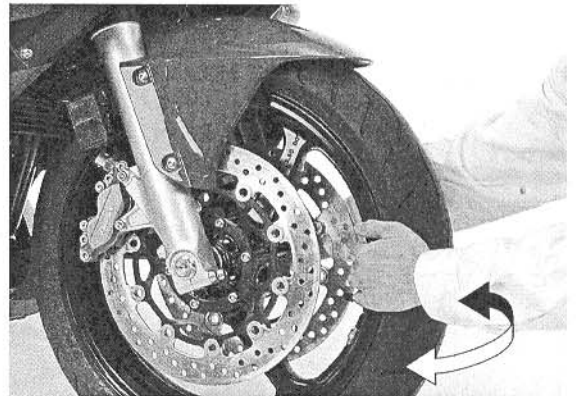

Support the motorcycle securely and raise the rear wheel off the ground.
Hold the swingarm and move the rear wheel sideways with force to see if the wheel bearings are worn.

Refer to page 15-8 for rear wheel service.

