



OIL PUMP

REMOVAL

Drain the engine oil (page 4-16).
Remove the right crankcase cover (page 10-5).
Remove the bolt, washer and oil pump driven sprocket.

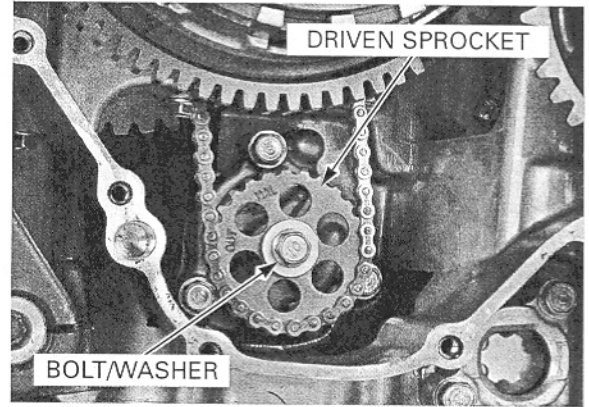


Remove the three flange bolts and oil pump assembly.

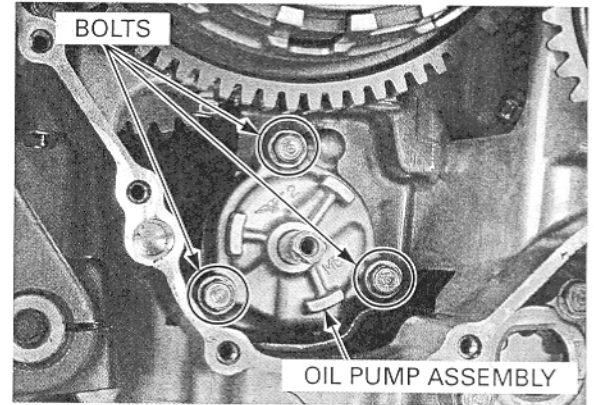

DISASSEMBLY

Remove the dowel pins.
Remove the oil pump assembly bolt and oil pump plate.

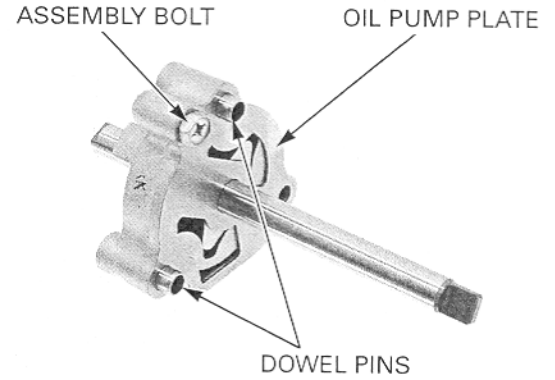

Remove the thrust washer, drive pin, oil pump shaft, outer rotor and inner rotor from the oil pump body.

Clean all disassembly parts thoroughly.

