



FUEL SYSTEM (Programmed Fuel Injection)


Remove the eight screws and upper air cleaner housing.

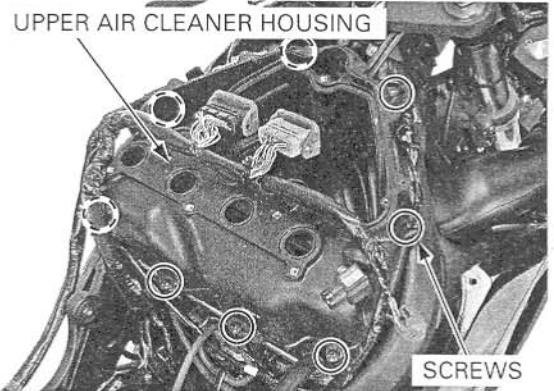

Remove the air funnel/air cleaner housing mounting screws, then remove the air funnels.

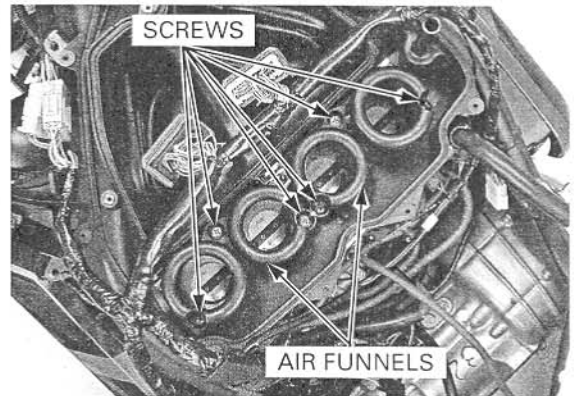

Disconnect the PAIR air suction hose from the air cleaner housing.

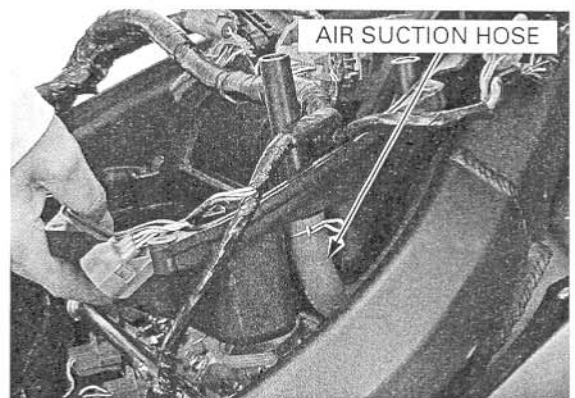

Disconnect the crankcase breather hose from the air cleaner housing.

Remove the wire band clamp from the air cleaner housing.

Remove the air cleaner housing.

