

## FUEL SYSTEM (Programmed Fuel Injection)

Start the engine and adjust the idle speed with the throttle stop screw.

**IDLE SPEED: 1,300 ± 100 rpm**

*The No.3 starter valve cannot be adjusted, it is the base starter valve.*

Match each intake vacuum pressure with the No.3 starter valve.

**STARTER VALVE VACUUM DIFFERENCE:  
20 mmHg**

Remove the plugs and connect the PAIR air suction hoses to the reed valve covers.

Adjust the idle speed if the idle speed differs from the specified speed.

**IDLE SPEED: 1,300 ± 100 rpm**

