


## IAT SENSOR

### REMOVAL/INSTALLATION

Remove the air cleaner housing cover (page 4-6).

Remove the screws and IAT sensor from the air cleaner housing cover.

Installation is in the reverse order of removal.

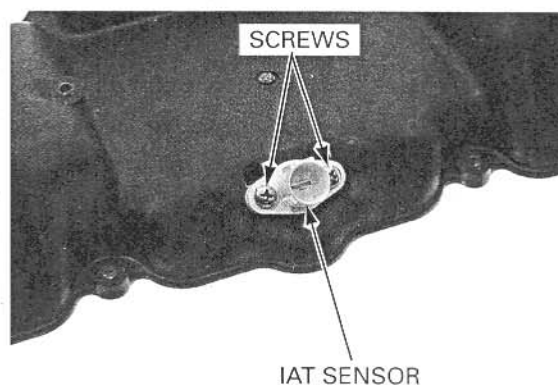

## ECT SENSOR


*Replace the ECT sensor while the engine is cold.*

### REMOVAL/INSTALLATION

Drain the coolant from the system (page 7-6).

Disconnect the ECT sensor connector from the sensor.

Remove the ECT sensor and sealing washer.

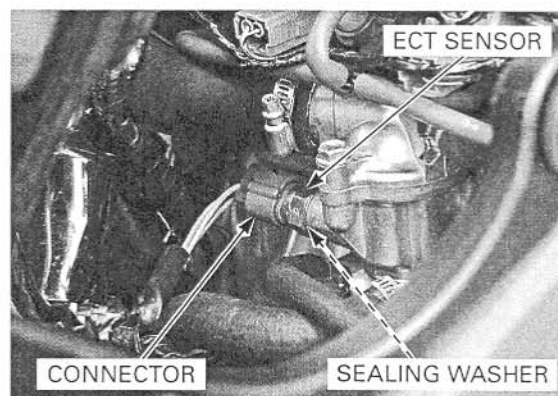

*Always replace a sealing washer with a new one.*

Install a new sealing washer and ECT sensor.

Tighten the ECT sensor to the specified torque.

**TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)**

Connect the ECT sensor connector.

Fill the cooling system with recommended coolant (page 7-6).

