


FUEL SYSTEM (Programmed Fuel Injection)


Remove the O₂ sensor unit.

- Be careful not to damage the sensor wire.
- Do not use an impact wrench while removing or installing the O₂ sensor, or it may be damaged.

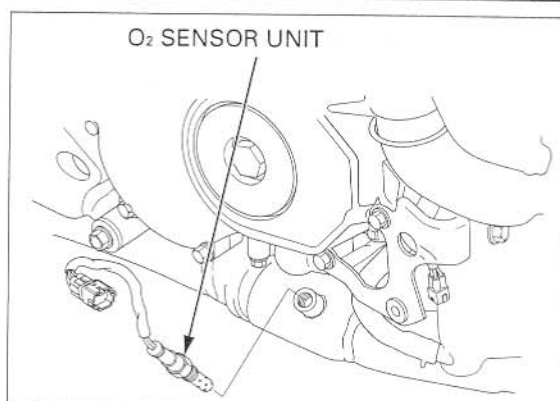

Install the O₂ sensor unit.
Tighten the unit to the specified torque.

TORQUE: 25 N·m (2.6 kgf·m, 19 lbf·ft)

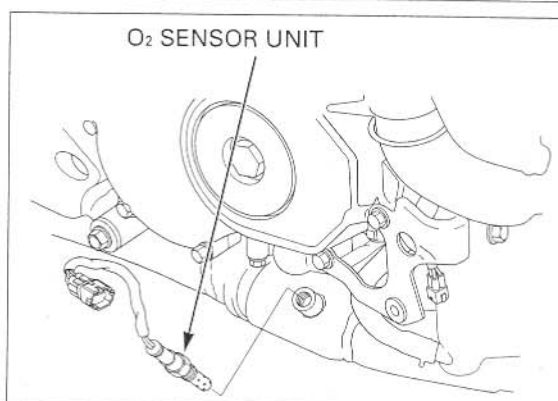

Route the O₂ sensor wire into the frame.
Connect the O₂ sensor 4P (Natural) connector.

