



**CYLINDER HEAD/VALVES**


Disconnect the ignition coil connectors and remove the direct ignition coils.

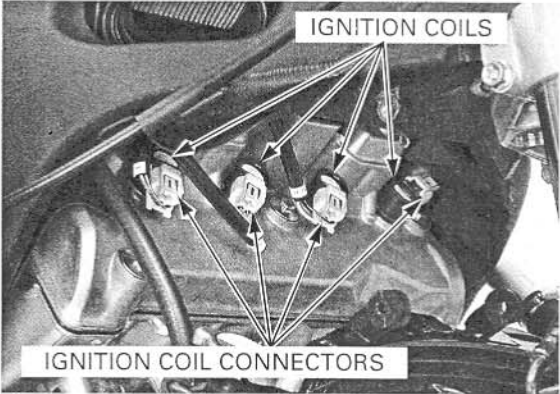

Remove the cylinder head cover bolts.

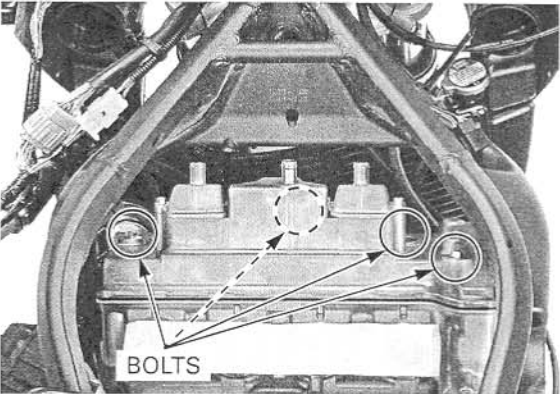

Remove the cylinder head cover from the cylinder head.

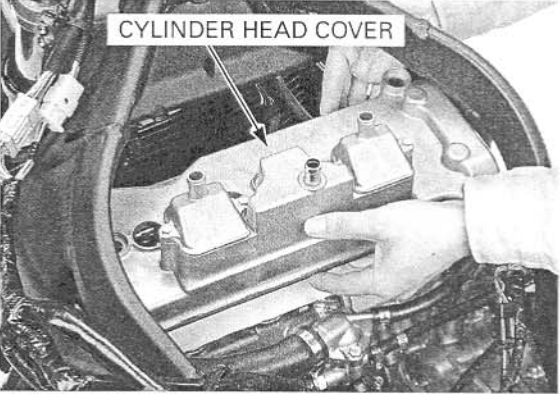

**CYLINDER HEAD COVER DISASSEMBLY**

Remove the cylinder head cover packing.  
Remove the bolts and breather plate and gasket.

