



CYLINDER HEAD/VALVES

Remove the bolts and PAIR check valve cover.

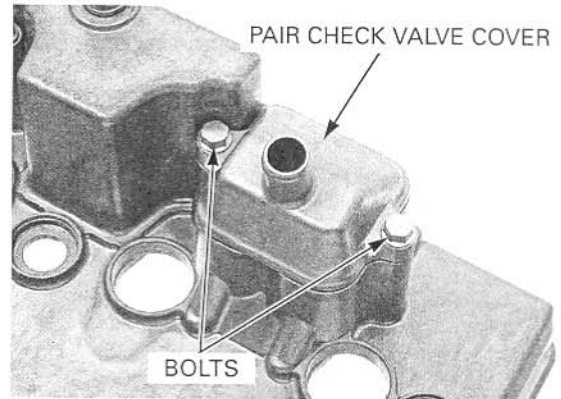


Remove the PAIR check valves from the cylinder head cover.

Check the PAIR check valve for wear or damage, replace if necessary.

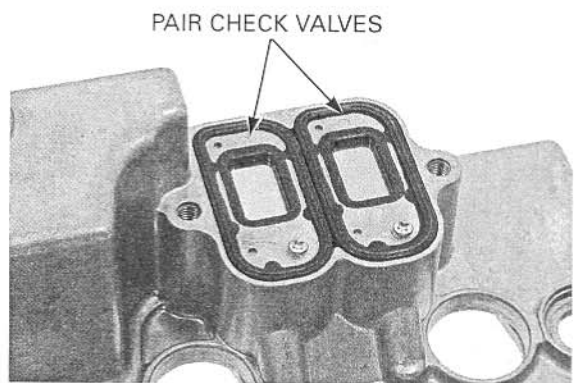

Remove the port plates from the cylinder head cover.

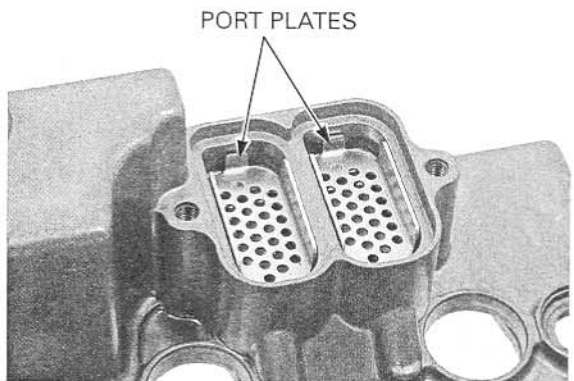

CAMSHAFT REMOVAL

Remove the cylinder head cover (page 9-6).

Avoid damaging the cam pulse generator while removing the camshafts, remove the bolt, clamp and cam pulse generator from the cylinder head.

