

# 10. CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

---

COMPONENT LOCATION.....	10-2	CLUTCH.....	10-7
SERVICE INFORMATION.....	10-3	STARTER CLUTCH.....	10-17
TROUBLESHOOTING.....	10-4	GEARSHIFT LINKAGE.....	10-22
RIGHT CRANKCASE COVER REMOVAL....	10-5	RIGHT CRANKCASE COVER INSTALLATION.....	10-24