


## CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Check the starter driven gear for abnormal wear or damage.


Measure the starter driven gear boss O.D.

**SERVICE LIMIT: 45.642 mm (1.7969 in)**

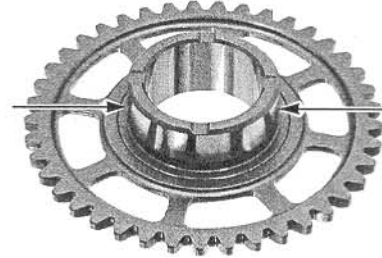

Check the starter reduction gear for wear or damage and replace it if necessary.

STARTER REDUCTION GEAR

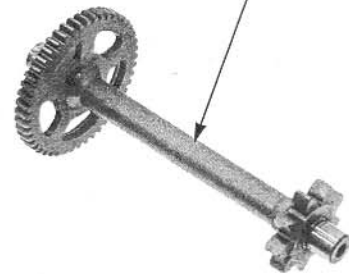

### ASSEMBLY

STARTER DRIVEN GEAR

ONE-WAY CLUTCH

NEEDLE BEARING

SNAP RING

STARTER CLUTCH OUTER

74 N·m (7.5 kgf·m, 54 lbf·ft)