


## ALTERNATOR

### ALTERNATOR COVER REMOVAL

Remove the following:

- Lower cowls (page 3-6)
- Middle cowls (page 3-7)


Disconnect the alternator 3P (Natural) connector.

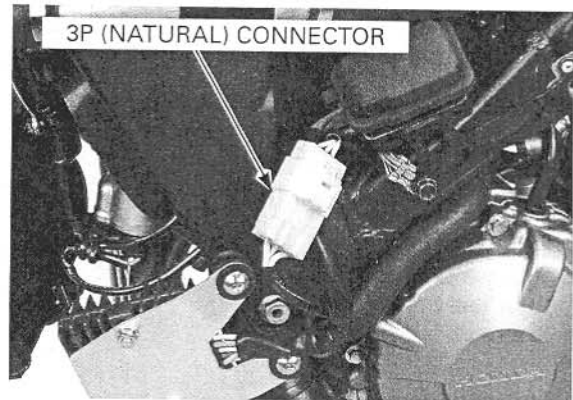

*The alternator cover (stator) is magnetically attached to the flywheel, be careful during removal.*


Remove the alternator cover SH bolts and alternator cover.

- Engine oil will run out when the alternator cover is removed. Set a clean oil pan under the engine and add the recommended oil to the specified level after installation.

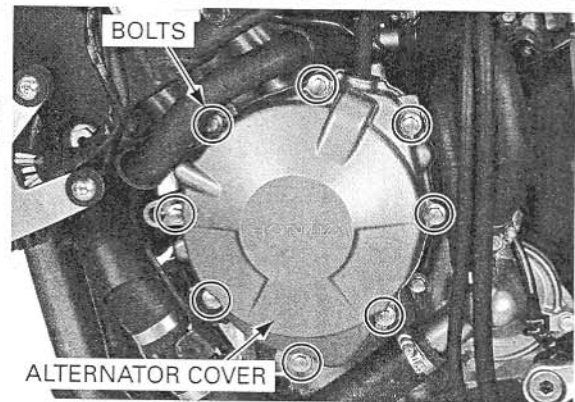

Remove the dowel pins.

Clean off any sealant from the alternator cover mating surfaces.

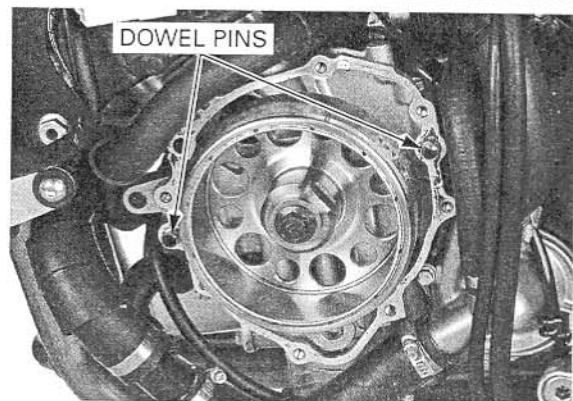

## STATOR

### REMOVAL

Remove the alternator cover (page 11-4).

Remove the bolt and stator wire clamp.  
Remove the alternator wire grommet from the alternator cover.

Remove the socket bolts and stator.

