


CRANKCASE/TRANSMISSION

Apply oil to a new O-ring and install it into the oil inspection window groove.
Install the oil inspection window onto the lower crankcase.
Install and tighten the bolts securely.



Apply a sealant to the oil pressure switch threads as shown.
Tighten the oil pressure switch to the specified torque while holding the switch base.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

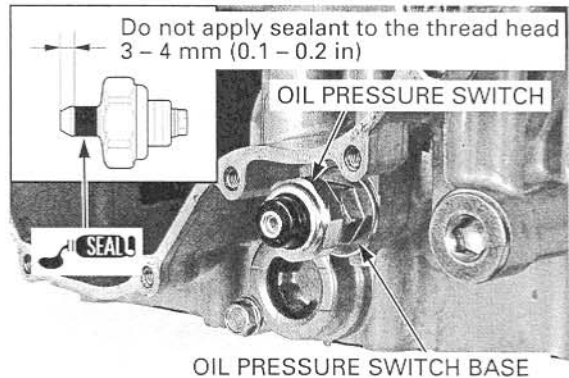

Install the vehicle speed sensor, tighten the bolt and clamp securely.

Tighten the neutral switch with a new sealing washer to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

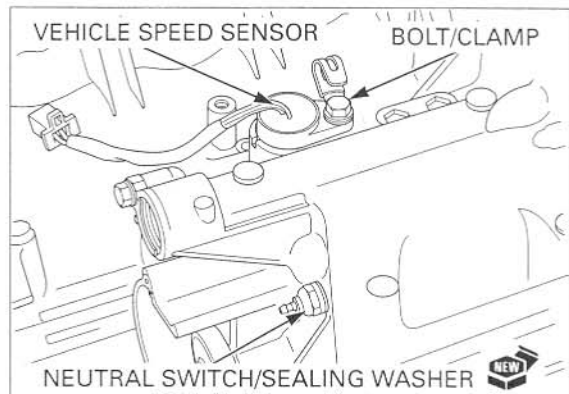

Install a new O-ring into the groove of the water hose joint.
Install the water hose joint to the cylinder block.

