


FRONT WHEEL/SUSPENSION/STEERING

Remove the following:

- Dust seal
- Upper bearing inner race
- Upper bearing
- Steering stem
- Lower bearing

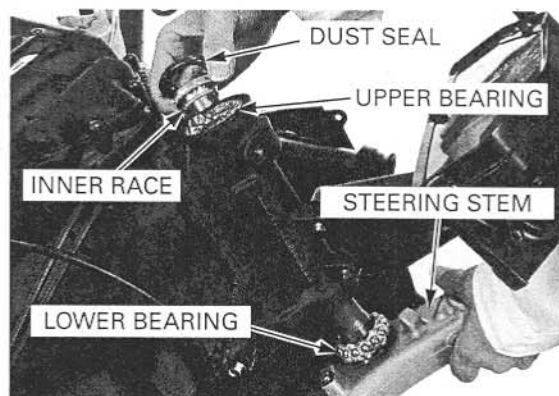

BEARING REPLACEMENT

Always replace the bearings and races as a set.

Replace the races using the special tools as described in the following procedure.

*For U.S.A. only
outer race replacement, refer to (page 14-32).*

TOOLS: (Not available in U.S.A.)

- | | |
|-------------------------------|---------------|
| (1) Driver attachment (upper) | 070MF-MCJ0100 |
| (2) Driver attachment (lower) | 070MF-MCJ0200 |
| (3) Driver shaft assembly | 07946-KM90301 |
| (4) Bearing remover, A | 07946-KM90401 |
| (5) Bearing remover, B | 07NMF-MT70110 |
| (6) Assembly base | 07946-KM90600 |

