

HYDRAULIC BRAKE

Keep the piston, cups, spring, snap ring and boot as a set; do not substitute individual parts.

When installing the cups, do not allow the lips to turn inside out.

Be certain the snap ring is firmly seated in the groove.

Coat all parts with clean brake fluid before assembly.

Dip the piston in brake fluid.
Install the spring into the piston.
Install the piston assembly into the master cylinder.

Install the snap ring with the special tool.

TOOL:

Snap ring pliers

07914-SA50001

Install the boot.

Install the brake light switch and tighten the screw to the specified torque.

TORQUE: 1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)

