


DISASSEMBLY

Remove the screw and reservoir hose joint from the master cylinder.

Remove the O-ring from the joint.

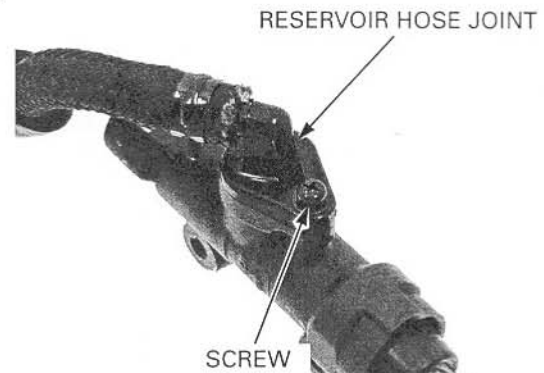

Be careful not to damage the boot.


Remove the boot from the master cylinder body.

Remove the snap ring from the master cylinder body using the special tool as shown.

TOOL:


Snap ring pliers

07914-SA50001

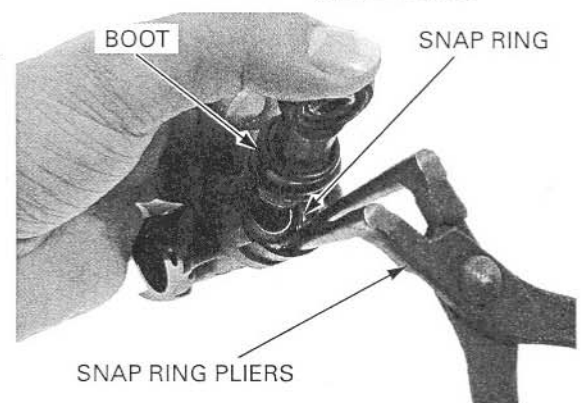

Remove the push rod, master piston and spring.

Clean the inside of the cylinder with clean brake fluid.

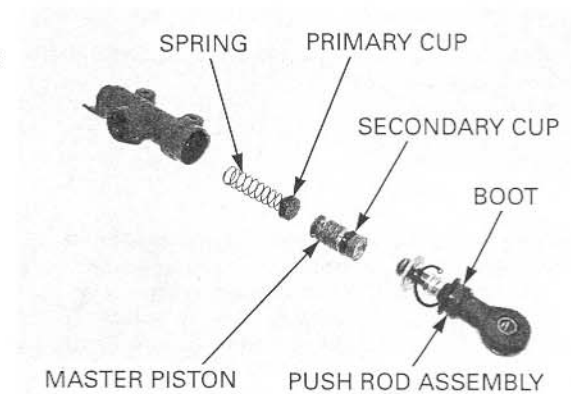

INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for abnormal scratches.

Measure the master cylinder I.D.

SERVICE LIMIT: 15.925 mm (0.6270 in)

Measure the master cylinder piston O.D.

SERVICE LIMIT: 15.815 mm (0.6226 in)

