

ELECTRIC STARTER


DIODE

REMOVAL

Remove the following:

- Lower cowls (page 3-6)
- Middle cowls (page 3-7)

Open the fuse box and remove the diode.

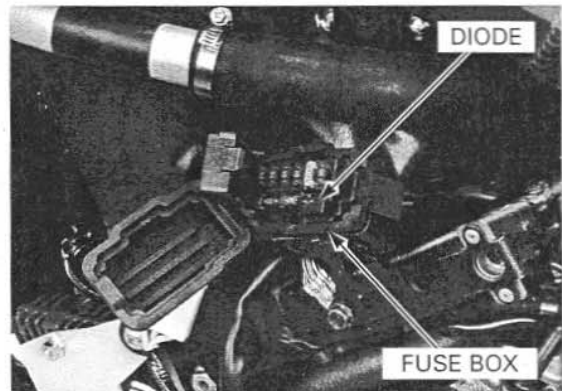

INSPECTION

Check for continuity between the diode terminals. When there is continuity, a small resistance value will register.

If there is continuity, in one direction, the diode is normal.

INSTALLATION

Install the diode in the reverse order of removal.

