


LIGHTS/METERS/SWITCHES

HANDLEBAR SWITCHES


Remove the fuel tank cover (page 3-15).
Disconnect the handlebar switch connectors.

Check for continuity between the wire terminals of the handlebar switch connector.
Continuity should exist between the color coded wire terminals as follows:

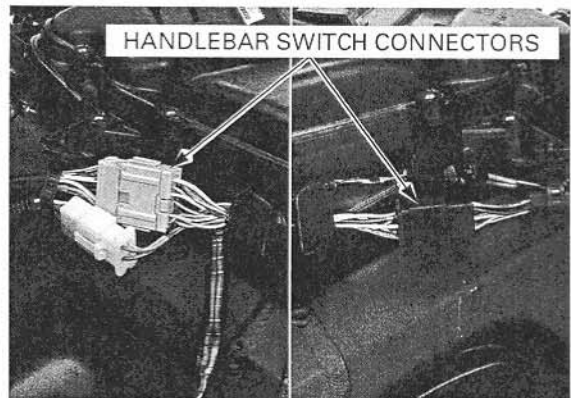

ENGINE STOP SWITCH

	IG	BAT
OFF		
RUN	○—○	
COLOR	BI	W/BI

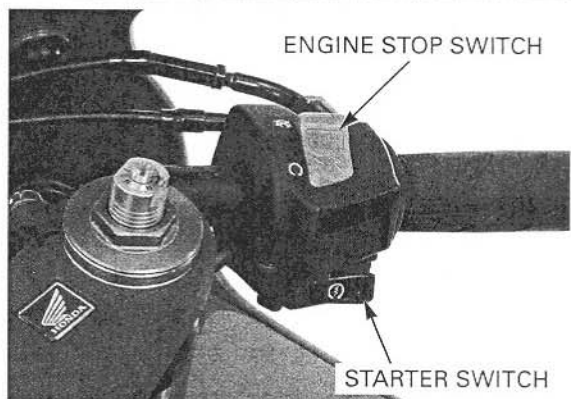


STARTER SWITCH

	ST	IG	BAT3	HL
FREE			○—○	
PUSH	○—○			
COLOR	Y/R	BI	BI/R	Bu/W

TURN SIGNAL SWITCH

	W	R	L	PAT5	PR	PL
R	○—○			○—○		
N				○—○	○—○	○—○
L	○—○		○—○	○—○		
COLOR	Gr	Lb	O	BI/Br	Lb/W	O/W

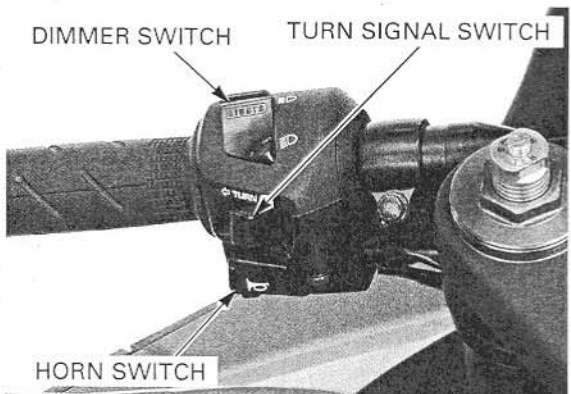

HORN SWITCH

	Ho	BAT
FREE		
PUSH	○—○	
COLOR		Lg

DIMMER SWITCHES

	HL	Lo	Hi
Lo			
(N)	○—○		○—○
Hi	○—○		○—○
COLOR	Bu/W		W