


LIGHTS/METERS/SWITCHES

NEUTRAL SWITCH

Disconnect the neutral switch connector from the switch.

Shift the transmission into neutral and check for continuity between the Light green wire and ground.

There should be continuity with the transmission in neutral, and no continuity when the transmission is in gear.


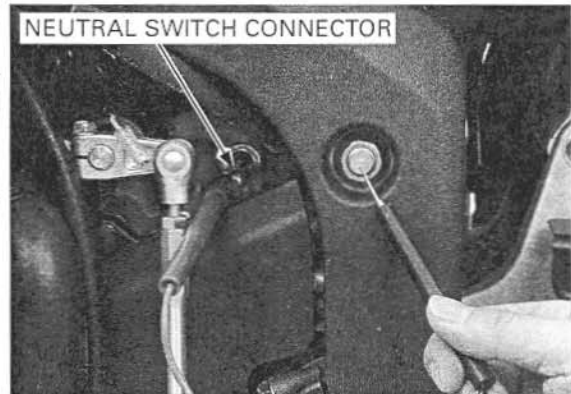


SIDE STAND SWITCH

INSPECTION

Disconnect the side stand switch 2P (Green) connector.

Check for continuity between the wire terminals of the side stand switch 2P (Green) connector. Continuity should exist only when the side stand is up.

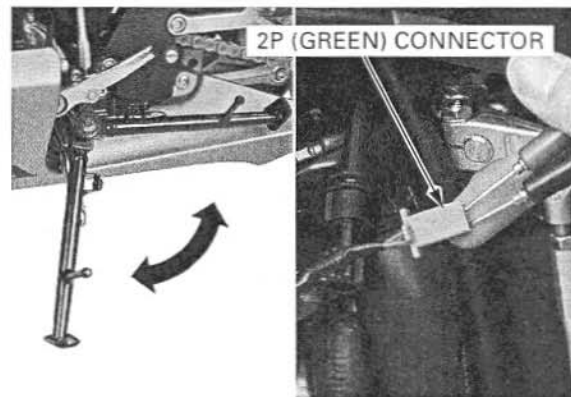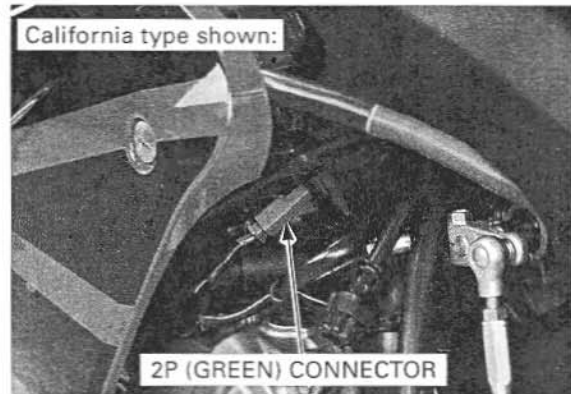

REMOVAL

Disconnect the side stand switch 2P (Green) connector.

