

## INDEX

- MAIN JOURNAL BEARING..... 13-8  
MAINTENANCE SCHEDULE..... 4-4  
MAP SENSOR..... 6-88  
MIDDLE COWLS..... 3-7  
MIL CODE INDEX..... 6-12  
MIL TROUBLESHOOTING..... 6-15  
MODEL IDENTIFICATION..... 1-2  
MUFFLER..... 3-20  
NEUTRAL SWITCH..... 20-22  
NUTS, BOLTS, FASTENERS..... 4-33  
O2 SENSOR (California type only)..... 6-99  
OIL COOLER..... 5-12  
OIL PRESSURE INSPECTION..... 5-5  
OIL PRESSURE SWITCH..... 20-16  
OIL PUMP..... 5-8  
OIL STRAINER/PRESSURE RELIEF VALVE..... 5-6  
PAIR CONTROL SOLENOID VALVE..... 6-96  
PASSENGER SEAT..... 3-4  
PGM-FI SELF-DIAGNOSIS INFORMATION..... 6-8  
PISTON/CYLINDER..... 13-13  
POOR HANDLING..... 22-6  
POOR PERFORMANCE AT HIGH SPEED..... 22-6  
POOR PERFORMANCE AT LOW AND IDLE SPEED..... 22-5  
POSITION LIGHT..... 20-7  
RADIATOR..... 7-10  
RADIATOR COOLANT..... 4-18  
RADIATOR RESERVE TANK..... 7-17  
REAR BRAKE CALIPER..... 16-26  
REAR COWL..... 3-5  
REAR FENDER..... 3-16  
REAR MASTER CYLINDER..... 16-18  
REAR WHEEL..... 15-8  
REAR WHEEL/SUSPENSION SPECIFICATIONS..... 1-9  
REGULATOR/RECTIFIER..... 17-10  
RIGHT CRANKCASE COVER INSTALLATION..... 10-24  
RIGHT CRANKCASE COVER REMOVAL..... 10-5  
SEAT..... 3-4  
SEAT RAIL..... 3-18  
SECONDARY AIR SUPPLY SYSTEM..... 4-19  
SERVICE INFORMATION  
ALTERNATOR..... 11-3  
BATTERY/CHARGING SYSTEM..... 17-3  
CLUTCH/STARTER CLUTCH/  
GEARSHIFT LINKAGE..... 10-3  
COOLING SYSTEM..... 7-3  
CRANKCASE/TRANSMISSION..... 12-3  
CRANKSHAFT/PISTON/CYLINDER..... 13-3  
CYLINDER HEAD/VALVES..... 9-3  
ELECTRIC STARTER..... 19-3  
ENGINE REMOVAL/INSTALLATION..... 8-3  
FRAME/BODY PANELS/EXHAUST SYSTEM..... 3-3  
FRONT WHEEL/SUSPENSION/STEERING..... 14-3  
FUEL SYSTEM (Programmed Fuel Injection)..... 6-3  
HYDRAULIC BRAKE..... 16-4  
IGNITION SYSTEM..... 18-3  
LIGHTS/METERS/SWITCHES..... 20-3  
LUBRICATION SYSTEM..... 5-3  
MAINTENANCE..... 4-2  
REAR WHEEL SUSPENSION..... 15-3  
SERVICE RULES..... 1-2  
SHIFT FORK/SHIFT DRUM/TRANSMISSION..... 12-7  
SHOCK ABSORBER..... 15-15  
SIDE COVERS..... 3-4  
SIDE STAND..... 4-29  
SIDE STAND SWITCH..... 20-22  
SPARK PLUG..... 4-7  
SPEEDOMETER/VEHICLE SPEED SENSOR..... 20-13  
STANDARD TORQUE VALUES..... 1-12  
STARTER CLUTCH..... 10-17  
STARTER MOTOR..... 19-6  
STARTER RELAY SWITCH..... 19-12  
STARTER VALVE..... 6-82  
STARTER VALVE SYNCHRONIZATION..... 6-86  
STATOR..... 11-4  
STEERING HEAD BEARINGS..... 4-34  
STEERING STEM..... 14-27  
SUSPENSION..... 4-29  
SUSPENSION LINKAGE..... 15-18  
SWINGARM..... 15-21  
SYSTEM DIAGRAM  
BATTERY/CHARGING SYSTEM..... 17-2  
ELECTRIC STARTER..... 19-2  
FUEL SYSTEM (Programmed Fuel Injection)..... 6-7  
IGNITION SYSTEM..... 18-2  
SYSTEM FLOW PATTERN..... 7-2  
SYSTEM LOCATION  
FUEL SYSTEM (Programmed Fuel Injection)..... 6-6  
LIGHTS/METERS/SWITCHES..... 20-2  
SYSTEM TESTING..... 7-5  
TACHOMETER..... 20-14  
THERMOSTAT..... 7-8  
THROTTLE BODY..... 6-72  
THROTTLE OPERATION..... 4-6  
TP SENSOR..... 6-91  
TROUBLESHOOTING  
BATTERY/CHARGING SYSTEM..... 17-4  
CLUTCH/STARTER CLUTCH/  
GEARSHIFT LINKAGE..... 10-4  
COOLING SYSTEM..... 7-4  
CRANKCASE/TRANSMISSION..... 12-4  
CRANKSHAFT/PISTON/CYLINDER..... 13-4  
CYLINDER HEAD/VALVES..... 9-5  
ELECTRIC STARTER..... 19-4  
FRAME/BODY PANELS/EXHAUST SYSTEM..... 3-3  
FRONT WHEEL/SUSPENSION/STEERING..... 14-6  
FUEL SYSTEM (Programmed Fuel Injection)..... 6-5  
HYDRAULIC BRAKE..... 16-5  
IGNITION SYSTEM..... 18-4  
LIGHTS/METERS/SWITCHES..... 20-5  
LUBRICATION SYSTEM..... 5-4  
REAR WHEEL SUSPENSION..... 15-7  
TURN SIGNAL..... 20-8  
TURN SIGNAL RELAY..... 20-24  
UNIT PROLINK SUSPENSION..... 2-4  
UPPER COWL..... 3-9  
UPPER INJECTOR..... 6-67  
VALVE CLEARANCE..... 4-11  
VALVE GUIDE REPLACEMENT..... 9-19  
VALVE SEAT INSPECTION/REFACING..... 9-19  
WATER PUMP..... 7-15  
WHEELS/TIRES..... 4-33  
WIRING DIAGRAMS  
A, AC type..... 21-3