


2. Service and maintenance

Maintenance schedule

Perform pre-ride inspection at each scheduled maintenance period.

Maintenance level

-  Intermediate.
We recommend that the service be performed by your dealer, unless you have the necessary tools and technical capacities. The procedures are included in an official Montesa Shop Manual.
-  Technical.
In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance legend

- I**: Inspect (clean, adjust, lubricate or replace, if necessary)
- R**: Replace
- C**: Clean

ITEM	FREQUENCY											Remarks
	Pre-ride check	500 Km.	1.500 Km.	3.000 Km.	4.500 Km.	6.000 Km.	Every 6 months	Yearly check	Every 2 years			
Fuel level	I											Make sure that you have enough fuel for the trip planned.
Throttle operation	I	I	I	I	I	I		I				
Engine oil	I	R	R	R	R	R		R				
Transmission Oil		R	R	R	R	R		R				
Drive Chain	I	I	I	I	I	I						Check the item after riding in adverse conditions and dusty areas.
Brake Fluid	I	I	I	I	I	I		I	R			
Brake Pad Wear	I	I	I	I	I	I						
Clutch system	I	I	I	I	I	I		I				
Wheels / tyres	I	I	I	I	I	I		I				
Side stand	I	I	I	I	I	I		I				Check the item after riding in adverse conditions and dusty areas.
Lights / horn	I	I	I	I	I	I		I				
Engine stop switch	I	I	I	I	I	I						
Fuel Line		I	I	I	I	I		I				