



- (1) MAIN WIRE HARNESS (TO CONNECTOR COVER)
- (2) MAIN WIRE HARNESS (TO ECU)
- (3) AIR FILTER BOX BREATHER HOSE
- (4) TRANSMISSION BREATHER HOSE
- (5) WIRE HARNESS
- (6) FUEL FEED HOSE

- (7) REGULATOR/RECTIFIER 5P (BLACK) CONNECTOR
- (8) CONDENSOR
- (9) CONDENSOR 2P (BLACK) CONNECTOR
- (10) BANK ANGLE SENSOR
- (11) CONNECTOR COVER
- (12) SPEED SENSOR CABLE