

	MAINTENANCE INFORMATION	1
	INSPECTION, ADJUSTMENT	2
ENGINE	OIL LUBRICATION SYSTEM	3
	FUEL SYSTEM	4
	COOLING SYSTEM	5
	ENGINE REMOVAL	6
	CYLINDER HEAD, CYL, PISTON, PC VALVE	7
	CLUTCH, KICKSTARTER, GEAR SHIFT LINK	8
	TRANSMISSION	9
	<b>AC</b> GENERATOR	10
	CRANKCASE, CRANKSHAFT	11
	FRAME	FRONT WHEEL, SUSPENSION, STEERING
REAR WHEEL, SUSPENSION		13
BRAKES (DISC BRAKE)		14
FAIRING, EXH CHAMBER, RR FENDER, <sup>SUB</sup> FRAME		15
ELECTRICAL	BATTERY, CHARGING SYSTEM	16
	IGNITION SYSTEM	17
	LIGHTS, METERS, SWITCHES	18
	CONTROL UNIT, SERVO MOTOR, <sup>OIL PUMP</sup> SOLENOID	19
	<b>NSR250R(J)</b> SPECIAL FEATURES	20
	<b>NSR250R-SP</b> SPECIAL FEATURES	21