


BRAKE DISC, PADS

Pad Wear

Inspect pad wear using the marks and direction arrows.

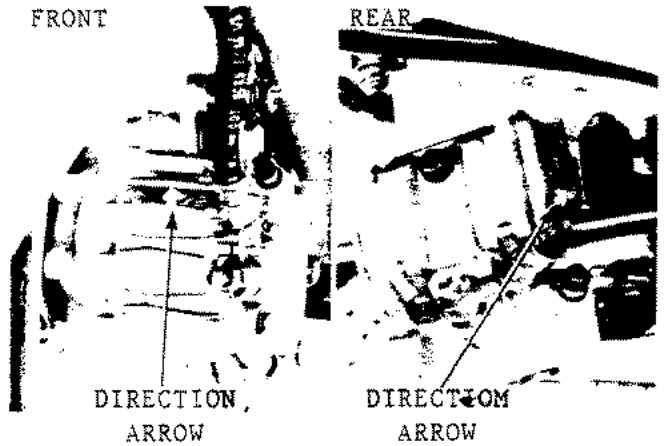


Replace if worn to the usage mark (14-4)

* Replace brake pads as a set

Inspect brake disc face for damage & wear (14-7)

Brake Fluid Replacement

Replace brake fluid once a year (14-3)

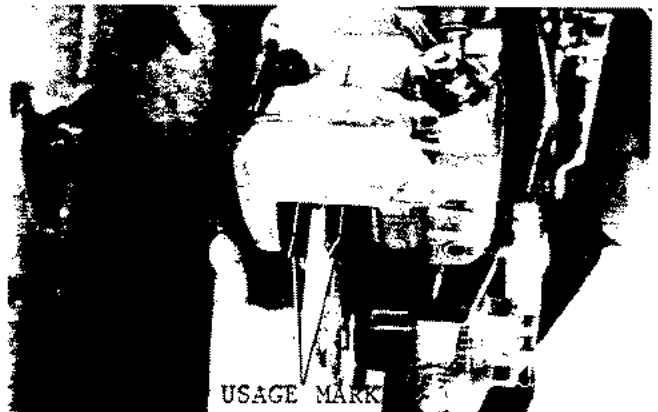


MOVEMENT SYSTEM

Wheels

Tire pressures

Stu pressures : kg. cm²

	FRT	REAR
1 rider	2.25	2.25
2 riders	2.25	2.50
Tire size	100/80-17 52H	130 70-18 63H

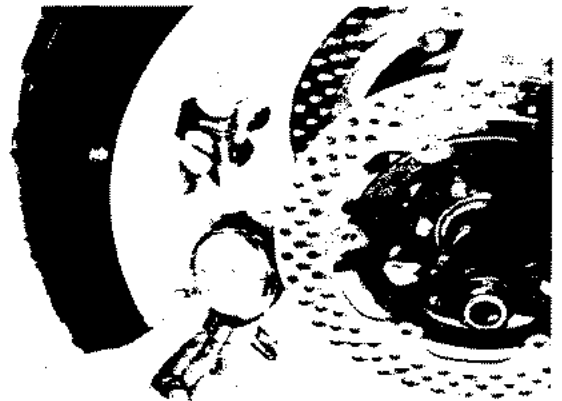

Inspect tire pressures with wheels on the ground

Wheel nut & wheel bolt loosening

Inspect frt axle bolt & axle pinch bolt for loosening

Inspect rear axle nut for loosening

If loose tighten to torques below:

- Frt axle bolt 5.5-6.5Kg-m
- Axle pinch bolt 1.5-2.0Kg-m
- Rear axle nut 8.0-10.0Kg-m

Inspect frt/rear wheels for warpage and damage (12-6; 13-3)

