
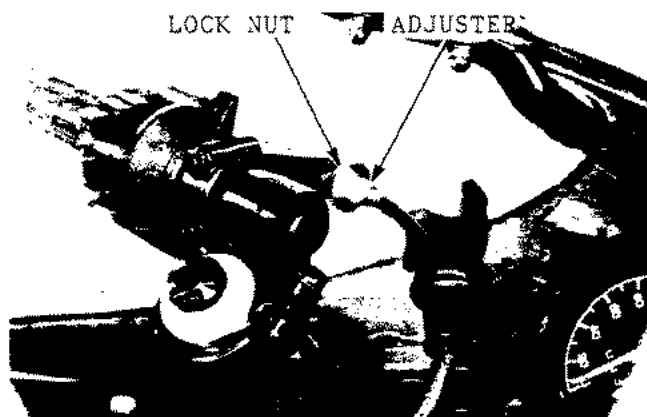


For the main adjustment, remove lower fairing (15-3), loosen lock nut and turn adjuster nut.

For final adjustment, loosen handle lock nut and turn adjuster

* Do not increase adjuster thread more than 8mm

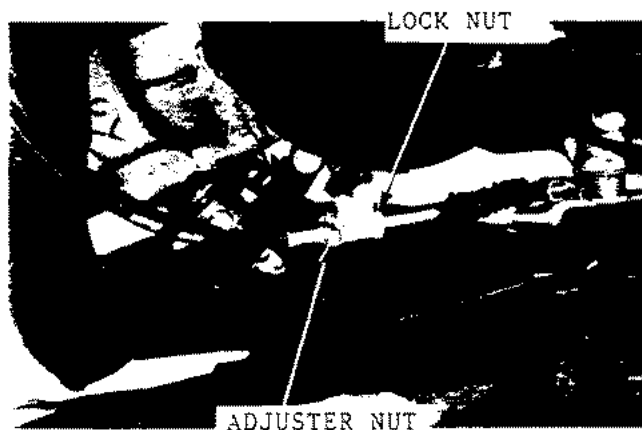

TRANSMISSION

Oil Leakage & Oil Capacity

* Inspect level, with motorcycle on level ground
If below upper level mark, fill with recommended oil to upper level mark

Recommended Transmission Oil

Honda standard oil Ultra U (4 cycle motorcycle SAE10W-30) or AP SE 10W-30 engine oil)

