


Check that the choke lever will fully open/fully close.

Check that the carburettor bi-starter valve will fully close/open

Adjustment can be done at the carburettor  
Remove the fuel tank ( 4-2)  
Remove the air cleaner ( 4-3)  
Loosen choke cable clamp and hold cable in position with a clamp

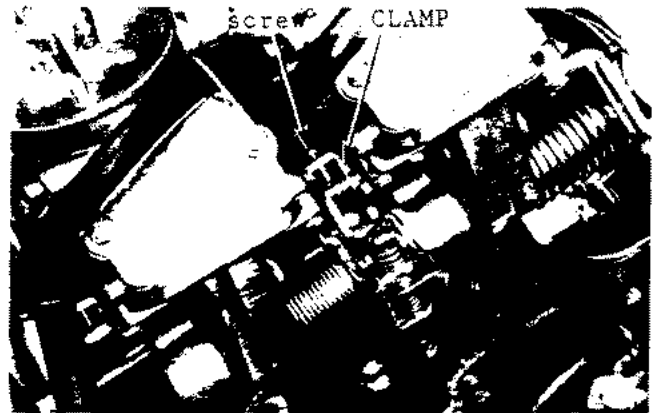

#### Fuel Filter Clogging

Remove seat ( 15-1)  
Remove tank ( 4-2)  
Remove fuel cock and fuel filter  
If necessary replace with new parts  
tighten lock nut

Torque : 2.0-2.5Kg-m

#### COOLING SYSTEM

##### Water

\* Place motorcycle on level ground when checking radiator fluid level.  
\* Do radiator fluid level inspection at the reservoir tank

Check that reservoir tank fluid level is between "UPPER" & "LOWER" marks

##### Recommended Radiator Fluid:

Honda Standard Ultra Radiator Fluid or equivalent (ratio = 30%)

#### LIGHTING SYSTEM

##### Headlight

With motorcycle on level ground, adjust headlight by turning screw with a driver

