


## CARBURETTOR

### Removal


Remove fuel tank ( 4-2)  
Remove air cleaner case ( 4-3)  
Remove lower fairing ( 15-3)  
Loosen drain plug and drain gasoline from carburettor

Remove intake chamber

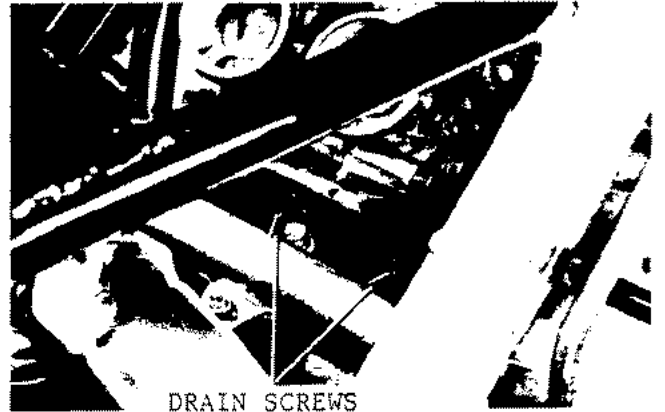

Remove oil path tube from carburettor & insert a screw in path tube so that oil does not drain out

Remove choke cable

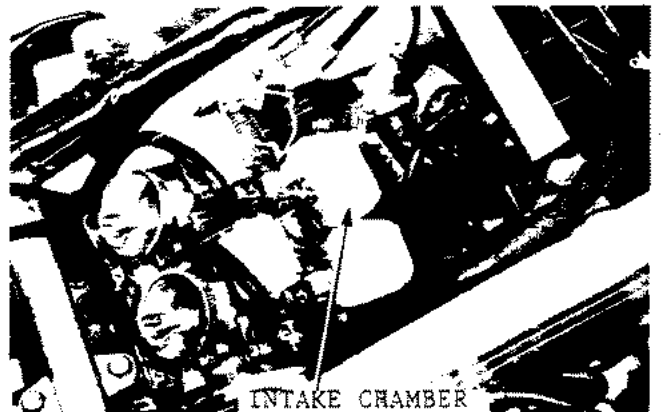

Loosen insulator band and raise carburettor up.  
Remove throttle cable and oil pump control cable from carburettor

\* After removing carburettor, place a cover or screw in reed valve so that rubbish cannot enter. Also take care that rubbish does not enter crankcase

