

Analysis

\* Float chamber, jets, throttle valve can be analysed without separating the carburettor. Only separate if necessary

Remove tube from carburettor

Turn the synchronizing bolt and align the No.2 carburettor throttle valve height with the No.1 carburettor throttle valve height

Loosen the bi-starter arms screw and remove the shaft and spring

Remove the rear bracket

AIR VENT TUBE

