



Remove front bracket

Remove throttle stop screw together with stay

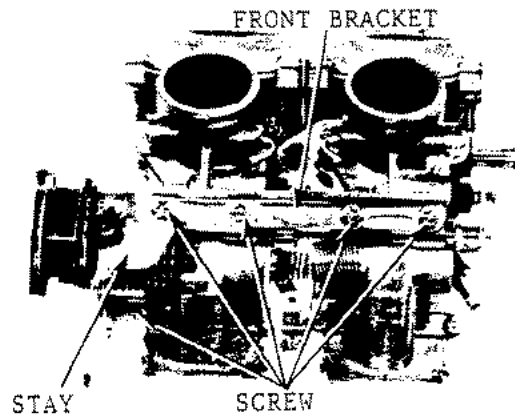


While taking care that the spring does not fly out, separate the carburettor

* Separate horizontally so as not to damage the fuel joint pipe

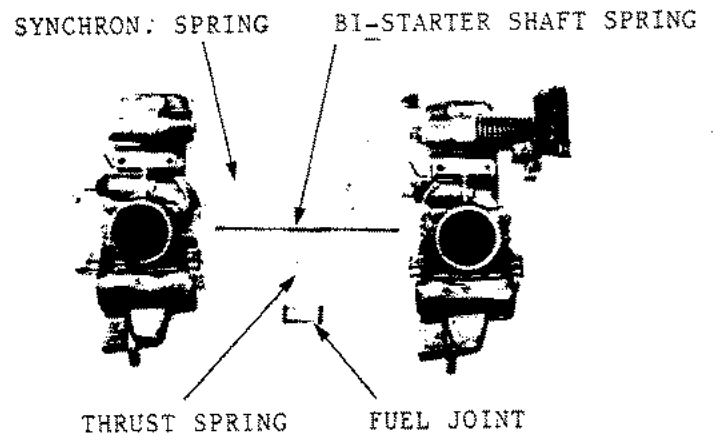

Remove screw and front chamber

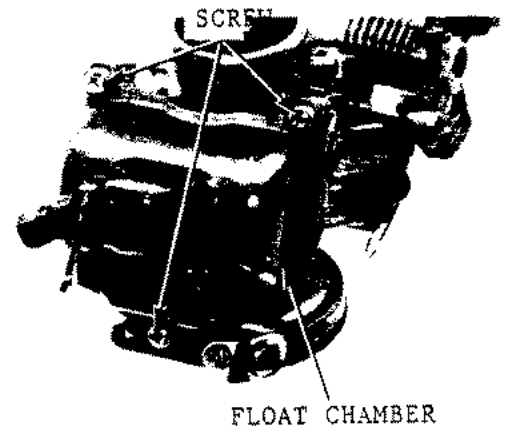

Remove float arm, float, and float valve

