


Inspect valve seat area for damage. Inspect float valve seat for damage

Remove air screw

* Before removing air screw, check position of it for safe revolutions
* Do not insert with force, as the seat facing is easily damaged

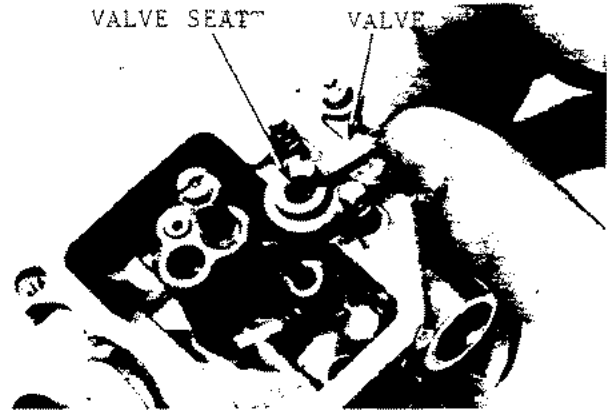


Remove main jet, needle jet holder, needle jet and slow jet

Clean each jet with cleaning solvent

Loosen bi-starter valve nut & remove spring and bi-starter valve.

Inspect bi-starter for wear and damage

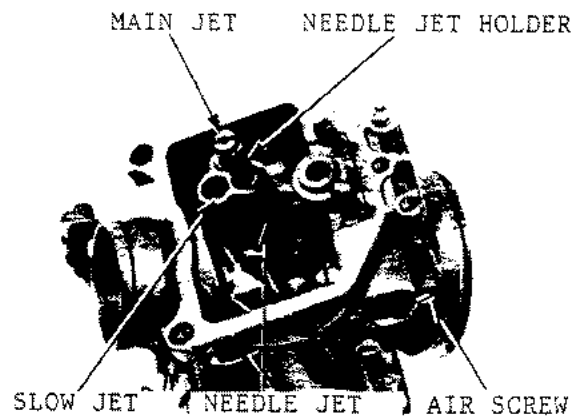


Remove the 3 screws fastening the throttle valve cover (or 4 screws if the throttle stop screw has not been removed)

Remove the throttle tube together with the cover

Use the following special tool

Torque Driver 07703-0010500

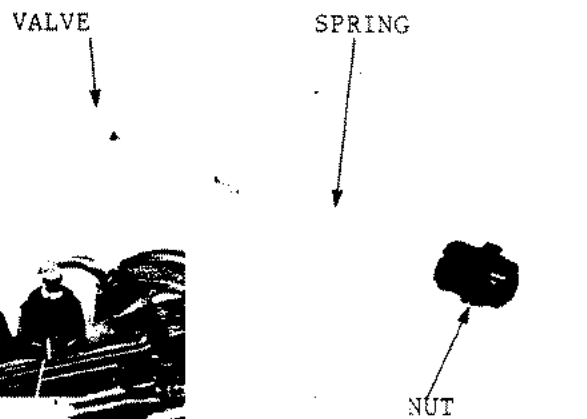

* Take care not to damage jet needles when removing it
* Do not do analysis of throttle valve if not totally necessary

