




Remove throttle valve from throttle link arm

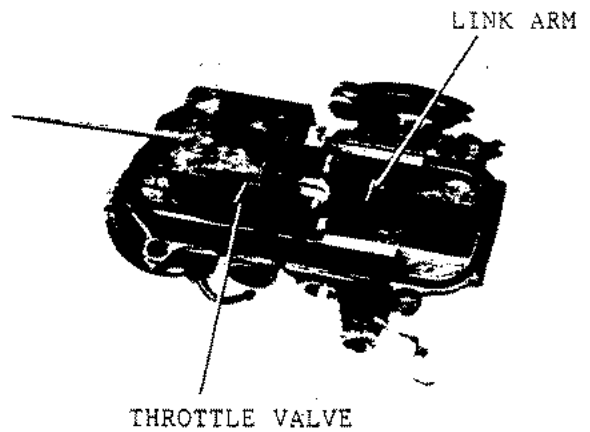


Remove set plate, htne pin, link and jet needle

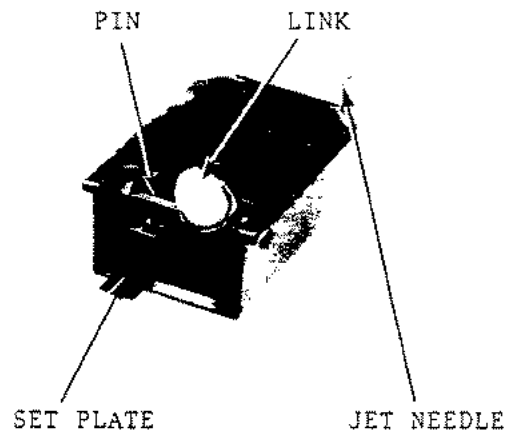

Inspect jet needle and throttle valve for damage and wear

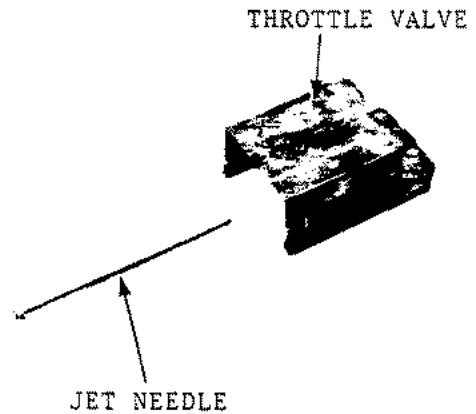

Remove nut, and spring washer and remove synchronizing arm and spacer
Remove link arm set screw and spring washer, and remove throttle drum and return spring together.

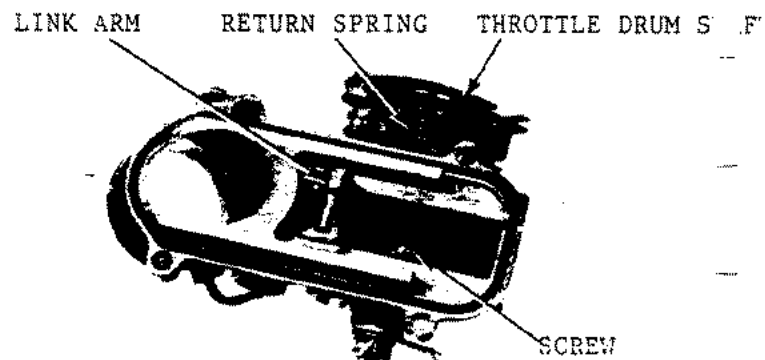

NUT, SYNCHRON. ARM, SPACER, SPRING WAHSER