

Install throttle shaft return spring, throttle drum together with link arm as a set

Install link arm set screw and spring washer as a set
 Install spacer and synchronizing arm & install nut and spring washer as a set

Insert jet needle to the throttle valve
 Install link with the pin
 Align set plate with the plate and insert
 Align the jet needle head with the set plate hole and install

Install throttle valve into link arm
 Install O ring into groove of throttle cover

While inserting jet needle into needle jet install into cover body

*** Take good care not to damage jet needle**

Install the 3 screw (if No.1 carburettor stop screw has not been removed, 4 screws)

Insert special screw with tool

Torque Driver 07703-0010500

* Install throttle valve cover while pushing body bottom

