

## THERMOSTAT

### Removal

- Remove fuel tank ( 4-2)
- Remove coupler holder from under fuel tank ( 17-3)
- Drain radiator fluid ( 3-4)
- Remove two bolts

Raise thermostat cover upward and remove thermostat

### Inspection

Put thermostat inot tester container, raise water temperature and test opening relief temperature

### Thermostat:

- |                       |           |
|-----------------------|-----------|
| Opening temperature   | 63-67°C   |
| Full open temperature | 80°C      |
| Full open lift        | above 8mm |

- \* Do not let thermostat touch container
- \* Do not place thermostat & thermometer near edge of container
- \* Replace thermostat if it opens even just a little above the standard temperature
- \* Measure opening lift for roughly 5 minutes after it has held 80°C

Insert thermostat into thermostat case and reassemble

- Assemble seal rubber into thermostat case
- Install thermostat cover and tighten bolts
- Install radiator fluid ( 15-4)
- Install coupler holder ( 17-3)
- Install fule tank ( 4-2)

