

THERMOSENSOR

Removal

Drain radiator fluid (5-4)
Remove thermostat wire connector from
thermosensor
Remove thermosensor from thermostat case

Inspection

Insert thermostat unit into test container,
raise water temperature gradually, and
measure thermosensor resistance change

Thermosensor Unit:

Temperature (°C)	60	118	122
Resistance (ohms)	90-120	16-19	14-18

Installation

Install thermosensor

Torque : 1.2-1.8Kg-m

* Apply sealing agent to thermostat when
installing it.

Connect thermosensor wire connector
Insert radiator fluid (5-4)

RADIATOR

Radiator, Hose Inspection

Inspect radiator core and fins for clogging
If fins are bent use a screwdriver and adjust

Inspect hose pipe and plug for damage and
splitting

