

Removal

* Perform when engine is cold

Remove lower fairing
Drain radiator (5-4)
Remove radiator hose from radiator

Remove radiator lower mount stay from cylinder head
Remove radiator upper bolt, and remove radiator from frame

Installation

Install in reverse order of removal
Insert radiator fluid (5-4), after this conduct increasing pressure test on radiator to check for leakages from each (5-4)

WATER PUMP

Mechanical Seal Inspection

Remove R Lower fairing (15-3)
Inspect radiator for leakages from the inspection hole in the lower part of the water pump. If any leakages, replace mechanical seal as it will be worn.

Water Pump Removal

Drain radiator fluid (5-4)
Remove radiator hose from water pump cover
Remove bolt, and remove water pump cover and gasket.

