


Remove impellor and washer

Inspect impellor for wear

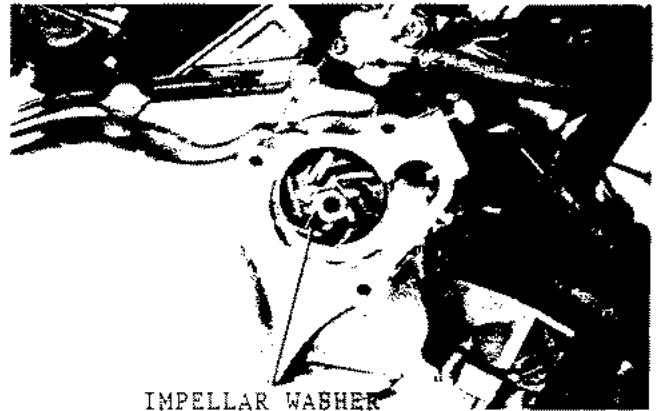

IMPELLAR WASHER


Mechanical Seal Replacement

Remove R crankcase cover (8-3)

Remove water pump shaft bearing

Special Tool:


Bearing removal set (10mm) 07936-GE00000

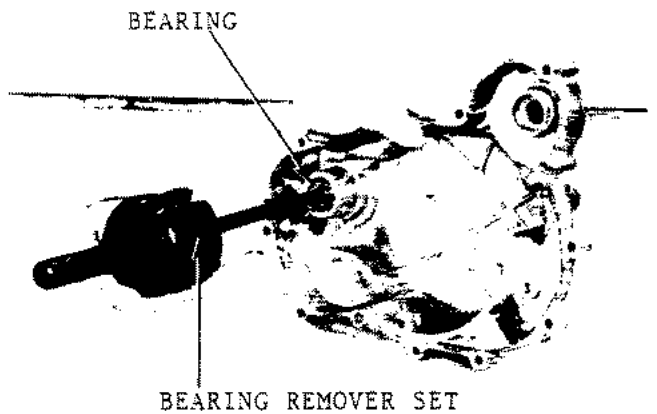

BEARING

BEARING REMOVER SET

Remove mechanical seal

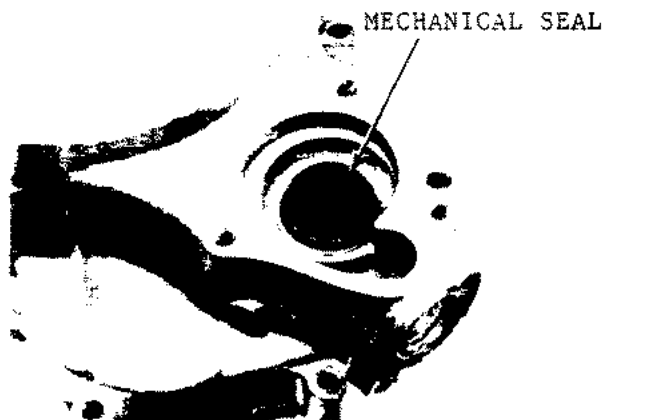

MECHANICAL SEAL

Insert new mechanical seal

Special Tool:

Mechanical seal driver attachment

07945-4150400

Standard Tool:

Driver handle A 07749-0010000

Insert new bearing

Standard tools:

Outer driver (24x26mm)


07746-0010700

Pilot (12mm)

07746-0040100

Driver handle A

07749-0010000

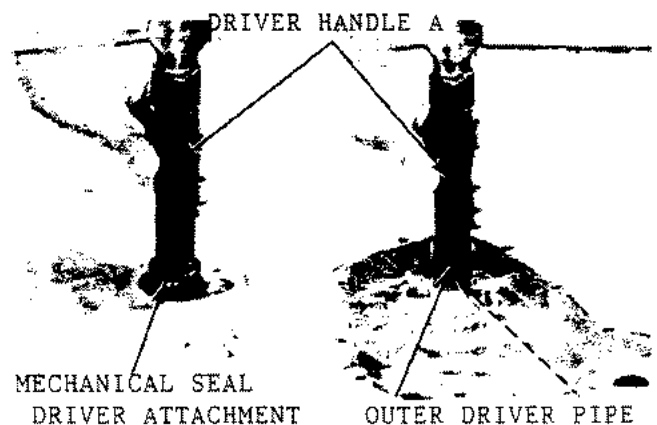

DRIVER HANDLE A

MECHANICAL SEAL

DRIVER ATTACHMENT

OUTER DRIVER PIPE