

---

TROUBLE SHOOTING:

Low Compression, Poor Response  
At Low Revs:

- Cylinder head gasket faulty
- Spark plug installation faulty
- = Piston rings damaged, sticking or worn
- Cylinder piston damaged or worn

High compression, Overheating,  
Knocking:

- Carbon deposits on cylinder head  
or pistons

Piston Noise:

- Cylinder, piston damaged
- Piston pin bore or piston pin damaged
- Conrod small end bearing damaged