

CYLINDER HEAD REMOVAL

Remove seat, side covers, lower fairing (section 15)

Drain radiator (5-4)

Rear Cylinder Head Removal


Remove fuel tank & air cleaner case (sect. 4)

Remove coupler holder & CDI unit (17-3)

Remove spark plug cap, bipass tube, water hose from cylinder head and spark plug

Remove spark plug

Remove cylinder head nut & remove cylinder head and gasket

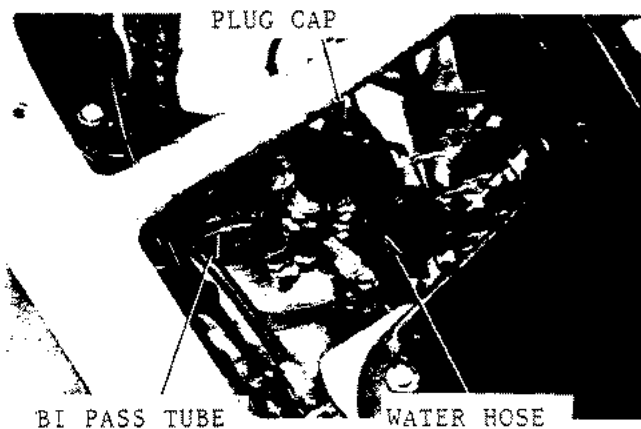

Front Cylinder Head removal

Remove radiator (5-7)

remove cylinder head water hose and spark plug cap from cylinder head and spark plug.

Remove spark plug



Remove cylinder head nut and remove cylinder head and gasket

